

**PRELIMINARY INSTRUCTIONS**  
**FOR**  
**FREQUENCY METER SET SCR-211-M**

**MANUFACTURED BY**  
**BENDIX RADIO**  
**DIVISION OF BENDIX AVIATION CORPORATION**



**RESTRICTED**

**PUBLISHED BY AUTHORITY**  
**OF**  
**THE CHIEF SIGNAL OFFICER**

**Order Numbers**  
**3666-Phila-42**  
**4675-Phila-42**  
**17134-Phila-42**

**November 13, 1942**

**PRELIMINARY INSTRUCTIONS**  
**FOR**  
**FREQUENCY METER SET SCR-211-M**

Manufactured by

**BENDIX RADIO**

**DIVISION OF BENDIX AVIATION CORPORATION**

**RESTRICTED**

**NOTICE--This document contains information affecting the national defense of the United States within the meaning of the Espionage Act (U.S.C. 50: 31, 32). The transmission of this document or the revelation of its contents in any manner to an unauthorized person is prohibited.**

**The information contained in documents marked RESTRICTED will not be communicated to the public nor to the press, but it may be communicated to any person known to be in the service of the United States, and to persons of undoubted loyalty and discretion who are cooperating in governmental work. (AR 380-5)**

**PUBLISHED BY AUTHORITY  
OF  
THE CHIEF SIGNAL OFFICER**

Order Numbers

3666-Phila-42  
4675-Phila-42  
17134-Phila-42

—i—

### **SAFETY NOTICE**

**THIS EQUIPMENT IS EXTREMELY ACCURATE AND SENSITIVE AND SHOULD BE HANDLED AS A PRECISION INSTRUMENT. UNDER NO CIRCUMSTANCES SHOULD THE ANTENNA TERMINAL OF FREQUENCY METER BC-221-M BE DIRECTLY CONNECTED TO ANY PART OF THE RADIO TRANSMITTER OR RADIO RECEIVER BEING MEASURED. DO NOT TIGHTEN THE DIAL LOCK MORE THAN NECESSARY. EXCESSIVE TIGHTENING WILL CAUSE THE DIAL SETTING TO BE DISTURBED.**

## TABLE OF CONTENTS

### SECTION I DESCRIPTION

<i>Par.</i>		<i>Page</i>
1.	Introductory . . . . .	1
2.	Components . . . . .	1
3.	Additional Equipment Required . . . . .	1
4.	Total Weight . . . . .	1
5.	Power Consumption . . . . .	1

### SECTION II EMPLOYMENT

6.	Initial Procedure . . . . .	3
7.	Installation . . . . .	3
8.	Operation . . . . .	3
9.	Readjustment of Trimmer Capacitors . . . . .	4
10.	Radio Transmitter Adjustments . . . . .	4
11.	Radio Receiver Adjustments . . . . .	6
12.	Frequency Measurements . . . . .	6

### SECTION III FUNCTIONING OF PARTS

13.	Frequency Meter BC-221-M . . . . .	9
14.	Vacuum Tubes . . . . .	11
15.	Calibration Book MC-177-M . . . . .	13
16.	Bag BG-81-D . . . . .	13

### SECTION IV MAINTENANCE

17.	General . . . . .	14
-----	-------------------	----

## TABLE OF CONTENTS (*continued*)

### SECTION IV

#### MAINTENANCE (*continued*)

<i>Par.</i>	<i>Page</i>
18. Servicing . . . . .	14
19. Resistors and Capacitors . . . . .	14
20. Tube Voltages . . . . .	15
21. Readjustment of Crystal Trimmer Capacitor . . . . .	15
22. Trouble Location and Remedy Data . . . . .	16

### SECTION V

#### SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS

23. Table of Replaceable Parts . . . . .	17
24. Identical and Interchangeable Items . . . . .	19
25. Addresses of Manufacturers . . . . .	20

## LIST OF ILLUSTRATIONS

Figure 1 — Frequency Meter Set SCR-211-M, Components . . . . .	vi
Figure 2 — Frequency Meter BC-221-M, Rear View Showing Battery Compartment . . . . .	2
Figure 3 — Frequency Meter BC-221-M, Chassis Front View . . . . .	5
Figure 4 — Frequency Meter BC-221-M, Chassis Bottom View . . . . .	8
Figure 5 — Frequency Meter BC-221-M, Front View with Chassis Removed . . . . .	12
Figure 6 — Frequency Meter BC-221-M, Front View Showing Spare Parts Compartment . . . . .	21
Figure 7 — Frequency Meter BC-221-M, Chassis Top View with Capacitor Shield Removed . . . . .	22
Figure 8 — Frequency Meter BC-221-M, Chassis Rear View . . . . .	23
Figure 9 — Frequency Meter BC-221-M, Chassis Left Side . . . . .	24
Figure 10 — Frequency Meter BC-221-M, Chassis Right Side . . . . .	25
Figure 11 — Frequency Meter Set SCR-211-M, Outline Dimensions . . . . .	26
Figure 12 — Frequency Meter BC-221-M, Schematic Diagram . . . . .	27
Figure 13 — Frequency Meter BC-221-M, Chassis Wiring Diagram . . . . .	28
Figure 14 — Frequency Meter Set SCR-211-M, Vacuum Tube Locations . . . . .	29
Figure 15 — Frequency Meter BC-221-M, Typical Het. Osc. Tuning Curves . . . . .	30



FIGURE 1 — FREQUENCY METER SET SCR-211-M, COMPONENTS

# FREQUENCY METER SET SCR-211-M

## SECTION I DESCRIPTION

**1. INTRODUCTORY.**—Frequency Meter Set SCR-211-M, is designed to provide a simple, accurate, and reliable crystal calibrated frequency indicating equipment for use in both the laboratory and in the field. Since it is completely portable and self-contained, it is particularly adaptable for adjusting aircraft radio transmitters and radio receivers to any desired frequency in the range from 125 to 20,000 kcs.

**2. COMPONENTS.**—Each Frequency Meter Set SCR-211-M, as furnished under this order, consists of the following component units:

Quantity	Article	Weight, (Lbs.)
1	Frequency Meter BC-221-M; size over all; height 13.13", width 10.13", depth 9.44"; Includes: 1 Frequency Meter BC-221-M Chassis (wired) 1 Crystal Unit DC-9-M (in operating position) 1 Calibration Book MC-177-M (inside front door) 1 Wrench for Bristo #6 Set Screw (spare parts compartment) 1 Wrench for Bristo #8 Set Screw (spare parts compartment) 2 Sets of Vacuum Tubes (one set in service and one set in spare parts compartment)	10.77
1	Instruction Book for Frequency Meter Set SCR-211-M	2.19
1	Bag BG-81-D	
*0 or 1	Additional Spare Set of Vacuum Tubes (Packed in battery compartment)	
1	Strap ST-19-A	

\* Order No. 3666-Phila.-42 and 4675-Phila.-42 have no additional sets of vacuum tubes supplied.  
Order No. 17134-Phila.-42 has one additional set of vacuum tubes supplied with each equipment.

**3. ADDITIONAL EQUIPMENT REQUIRED.**—The following equipment, not furnished on this order, is required to complete each Frequency Meter Set SCR-211-M:

QUANTITY	ARTICLE
1	Headset P-18 or P-20
12	Batteries BA-2 (6 in use, 6 spare)
8	Batteries BA-23 (4 in use, 4 spare)

**4. TOTAL WEIGHT.**—Frequency Meter Set SCR-211-M, ready for service with one set of batteries, weights 31¼ pounds.

**5. POWER CONSUMPTION.**—All power required for the operation of this equipment is supplied by the batteries listed in paragraph 3. The current drains at the specified voltage limits are as follows:

Filaments: 5.4 to 6.0 Volts, 0.8 to 0.9 Amp.

Plates: 121.5 to 135.0 Volts, 0.012 to 0.014 Amp.

These values are typical for operation with the HETerodyne OSCillator-XTAL CHECK-XTAL ONLY switch in the XTAL CHECK position, under which condition maximum plate current is drawn.



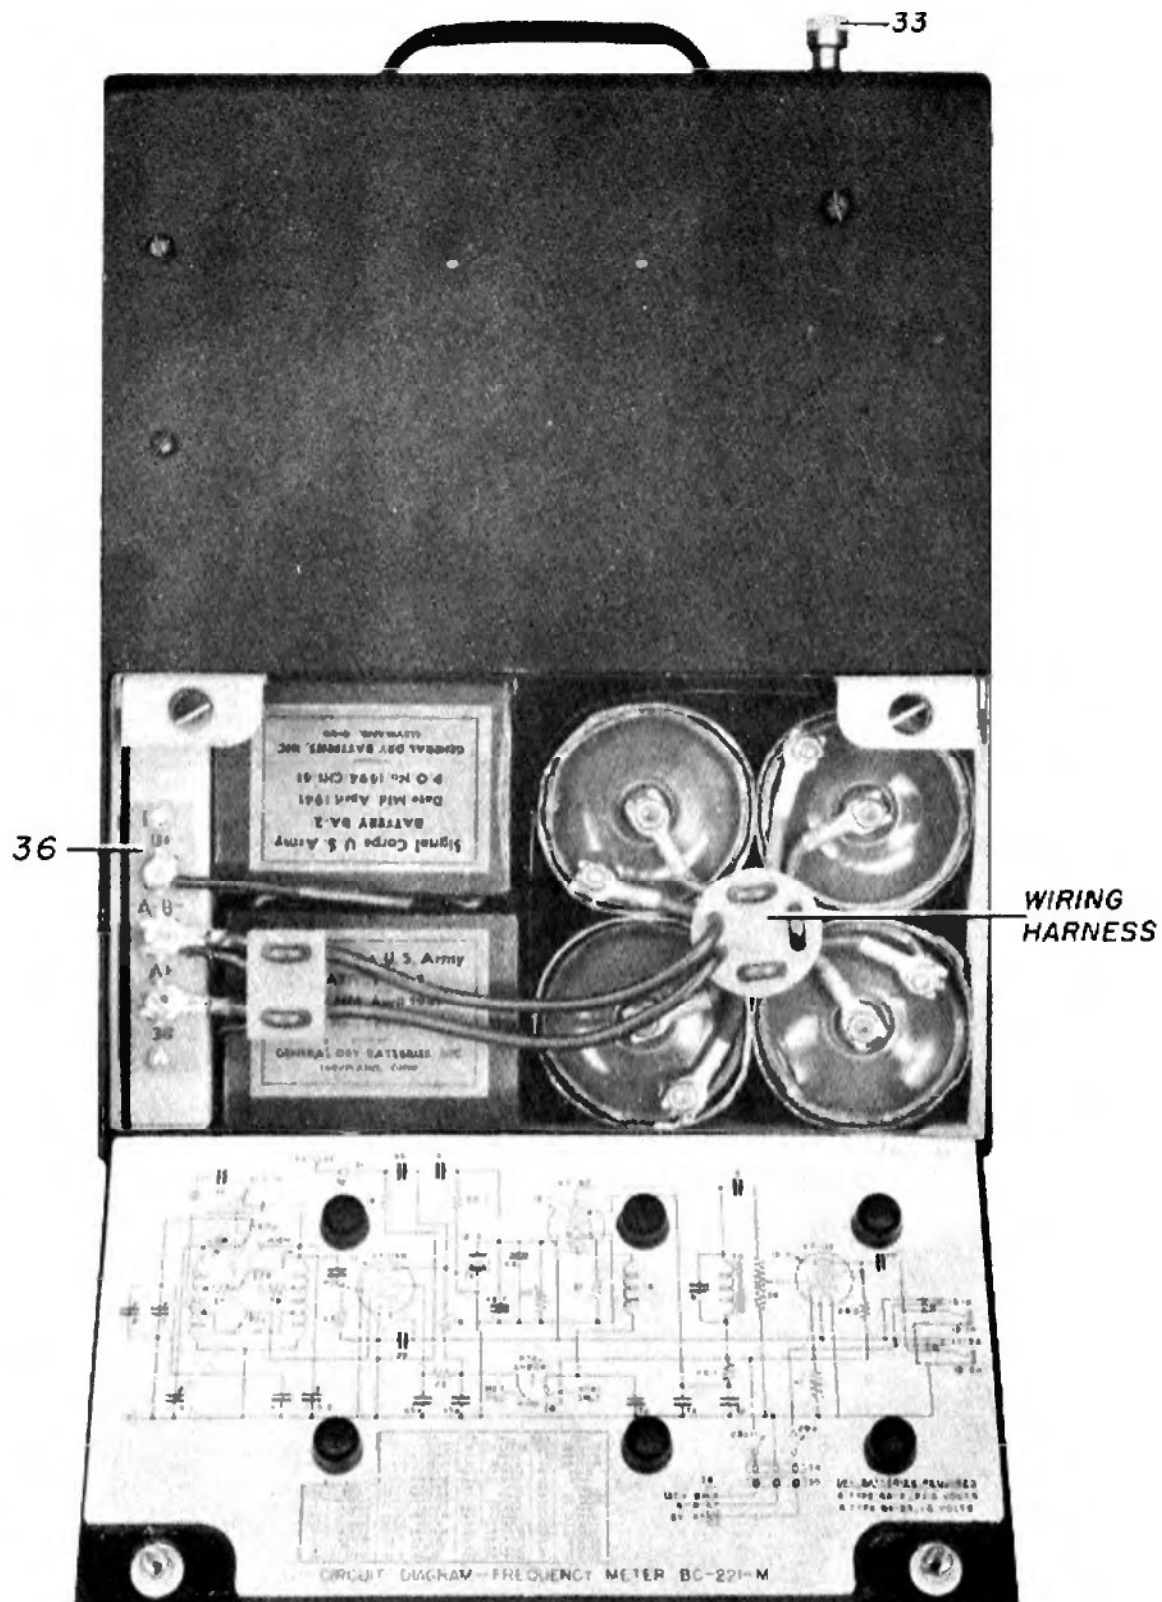


FIGURE 2 — FREQUENCY METER BC-221-M, REAR VIEW SHOWING BATTERY COMPARTMENT

## SECTION II

### EMPLOYMENT

**6. INITIAL PROCEDURE.**—Frequency Meter BC-221-M is shipped, enclosed within the carrying bag, with all vacuum tubes inserted in their respective sockets and clamped. After unpacking, thoroughly inspect all compartments of the frequency meter cabinet for possible damage which may have occurred during shipment. Remove the second spare set of tubes if any, (contained in a carton in the battery compartment), upon receipt of the equipment and place in stock.

**7. INSTALLATION.**—*a. Batteries.*—Since this is a portable equipment, practically no installation is required. However, the batteries necessary for its operation must be installed before the equipment can be made ready for use. Remove the frequency meter chassis from the cabinet while connecting batteries.

Four batteries BA-23 and six Batteries BA-2 are required. Open the battery compartment in the lower rear of the frequency meter cabinet and loosen the binderhead screw on the right hand outer side in order to release the metal strap provided for securing the filament battery. Then insert the four Batteries BA-23 under the strap with their terminal posts facing the rear of the cabinet and push well forward. Before tightening the securing strap, hold the wiring harness in such a position that the two lugs of the main cables align with the A+ and A-/B- terminals on the battery terminal board, and position the four batteries so that their terminal posts match up with the individual battery lugs on the harness (see Figure 2).

Tighten the securing strap with the batteries in this position. Assemble the six Batteries BA-2 in two layers of three each, with the top layer inverted (after interconnecting their respective terminal leads in series). See that the minus and plus 135-volt leads are free for connection to their respective terminals on the terminal board. Insert the batteries in the cabinet, connect them to the terminal board, and install the filament battery wiring harness.

Prior to replacing the frequency meter chassis, check the battery connections for 6-volt and 135-volt meter readings, respectively, at the battery terminal board.

*b. Antenna.*—A short antenna must be provided for coupling to the receivers and transmitters which are to be adjusted. This should preferably be a rigid wire, such as No. 12 B. & S. hard drawn bus, not over 2 to 3 feet long. This wire should be secured to the antenna terminal on the top of of the frequency meter cabinet

and so bent that its remote end will run parallel, and close, to the transmitter or receiver antenna lead. Where conditions will not permit this arrangement, such as in an airplane, a flexible insulated pick-up wire may be employed, with means provided to prevent its becoming a hazard during flight. One end should be skinned and secured to the antenna terminal on the frequency meter. Then, if the remote end is fitted with a completely taped test clip (jaws dulled), it will be possible to secure the lead at various coupling points, as desired, without grounding or contacting thereto. Under no circumstances should the antenna terminal of Frequency Meter BC-221-M be directly connected to any part of the transmitter or receiver being measured.

*c. Headset.*—Plug a Headset P-18 or P-20 in either PHONES jack; then turn the POWER switch ON and the HET. OSC.-XTAL CHECK-XTAL ONLY switch to XTAL CHECK. Allow the vacuum tube filaments to heat for at least 20 minutes. The equipment will then be ready for use.

**8. OPERATION.**—*a. Correcting to Calibration.*—(1) Before attempting to make any frequency adjustments, always correct the heterodyne oscillator to agree with the calibration through comparison with the crystal oscillator at the crystal check point nearest to the frequency desired. Comparison between the crystal and heterodyne oscillator may be made at many points over the calibrated range through the employment of the fundamental or harmonic frequencies of either or both oscillators. Comparison between the two oscillators is effected by rotating the heterodyne tuning control through a portion of the scale range corresponding to the crystal check point desired, and noting the beat tones as heard in the headset when plugged into either PHONES jack.

(2) To correct the heterodyne oscillator preparatory to setting on any desired frequency within the calibrated range, proceed as follows:

(a) From the HIGH or LOW frequency indices (pages 29 and 30) determine in which band the desired frequency is located, and set the FREQUENCY BAND switch to correspond.

(b) Also, from the frequency indices, ascertain on which page the desired frequency is listed, and turn thereto. The crystal check point nearest the desired frequency will be found noted in red at the bottom of this page, together with its dial setting.

## EMPLOYMENT

(c) Set the heterodyne oscillator dials to agree with this crystal check point dial setting (POWER switch ON and HET. OSC.-XTAL CHECK-XTAL ONLY switch at XTAL CHECK). A beat-note should be heard in the headset, as a complete absence of beat-note can result only from three possible conditions, i.e., when the heterodyne oscillator is exactly on calibration; when it is so far off calibration that the beat-frequency is above audibility; and when the equipment is defective. However, if no beat-notes are heard, either of the first two of these conditions may be determined by rotating the CORRECTOR dial to where the beat-notes become audible, and noting the direction of change. If the third condition is the cause, no beat-notes should be heard at any point in the complete heterodyne oscillator range.

(d) With the heterodyne oscillator dial on the desired crystal check point setting, adjust the heterodyne oscillator frequency as close to the crystal oscillator frequency as possible, by rotation of the CORRECTOR dial only. After the operator has become familiar with the equipment, it will be found that this adjustment can be precisely made to practically zero beat. This is possible because the design is such that all "locking in" tendencies have been minimized, and characteristic "rushes" due to the rise and fall of the beat-frequency peaks are aurally recognizable well below the lower limit of audible tone.

*b. Accuracy of Calibration.*—When corrected as described in paragraph 8a, the heterodyne oscillator frequency will agree with the calibration throughout the range of frequencies to which this particular crystal check point applies, provided that; the ambient temperature does not vary by more than  $\pm 5^{\circ}\text{C}$ ; the filament voltage and plate voltage do not vary individually or collectively by more than  $\pm 10\%$ ; and the frequency measurements under any or all of the conditions stated above are made not later than 15 minutes after correction.

### 9. READJUSTMENT OF TRIMMER CAPACITORS.

—It may be found that the heterodyne oscillator cannot be corrected to agree with the calibration as explained in paragraph 8a, particularly if the frequency meter is being used in a locality where either extreme condition of humidity prevails. Under such conditions, and then only, it becomes necessary to reset the heterodyne trimmer capacitors 3-1 and 3-2. Access to the trimmer adjusting screws may be obtained through the holes marked LOW and HIGH on the right hand wall of the frequency meter chassis after it has been

removed from the cabinet. The chassis should be conveniently placed on a firm foundation to the right and in front of the cabinet, and the respective power input plugs and jacks should be interconnected with laboratory test leads. A small screwdriver will be required to make these adjustments, the necessary procedure being as follows:

a. Place the unit in operation, with the FREQUENCY BAND switch set to LOW. Allow at least ten minutes for warm-up before proceeding.

b. Set the DIAL UNITS and DIAL HUNDREDS scales to agree with the reading given for 250 kcs on Page 27 of the calibration book. Set the CORRECTOR dial at midscale (5.5 divisions).

c. After making sure that the dials are set correctly as in b, rotate the trimmer capacitor 3-1 toward the right with a small screwdriver, while listening in the headset, until the heterodyne oscillator is set to zero beat of a strong beat with the crystal calibrator.

d. Check the ability of the CORRECTOR capacitor to reset to zero beat at all crystal check points listed on pages 28 and 31 of the calibration book, proceeding as outlined in paragraph 8a.

e. If the unit cannot be corrected at all crystal check points in the low band with the trimmer adjustment that was made with the CORRECTOR dial set at 5.5 for 250 kcs, repeat the processes outlined in c and d with the CORRECTOR dial set to 6 divisions for 250 kcs.

f. By thus progressing, a setting of the low frequency trimmer will be found where it will be possible with the CORRECTOR capacitor to reset the unit to zero beat at all crystal check point readings given for the low band in the calibration book.

g. Repeat the above described processes with the FREQUENCY BAND switch set to the high frequency band and the DIAL UNITS and DIAL HUNDREDS scales set to agree with the reading given for 4000 kcs on Page 71 of the calibration book. Set the trimmer capacitor 3-2 to the position where it is possible with the CORRECTOR capacitor to reset to zero beat at all crystal check points listed for the high frequency band.

### 10. RADIO TRANSMITTER ADJUSTMENTS.—a.

Briefly, the method of adjusting a radio transmitter to a desired frequency consists of zero beating the transmitter frequency with the proper heterodyne oscillator frequency, effecting the comparison by means of a headset plugged into one of the PHONES jacks located on the front panel of the frequency meter.

b. Specifically, the procedure is as follows:

(1) Correct the heterodyne oscillator to calibration

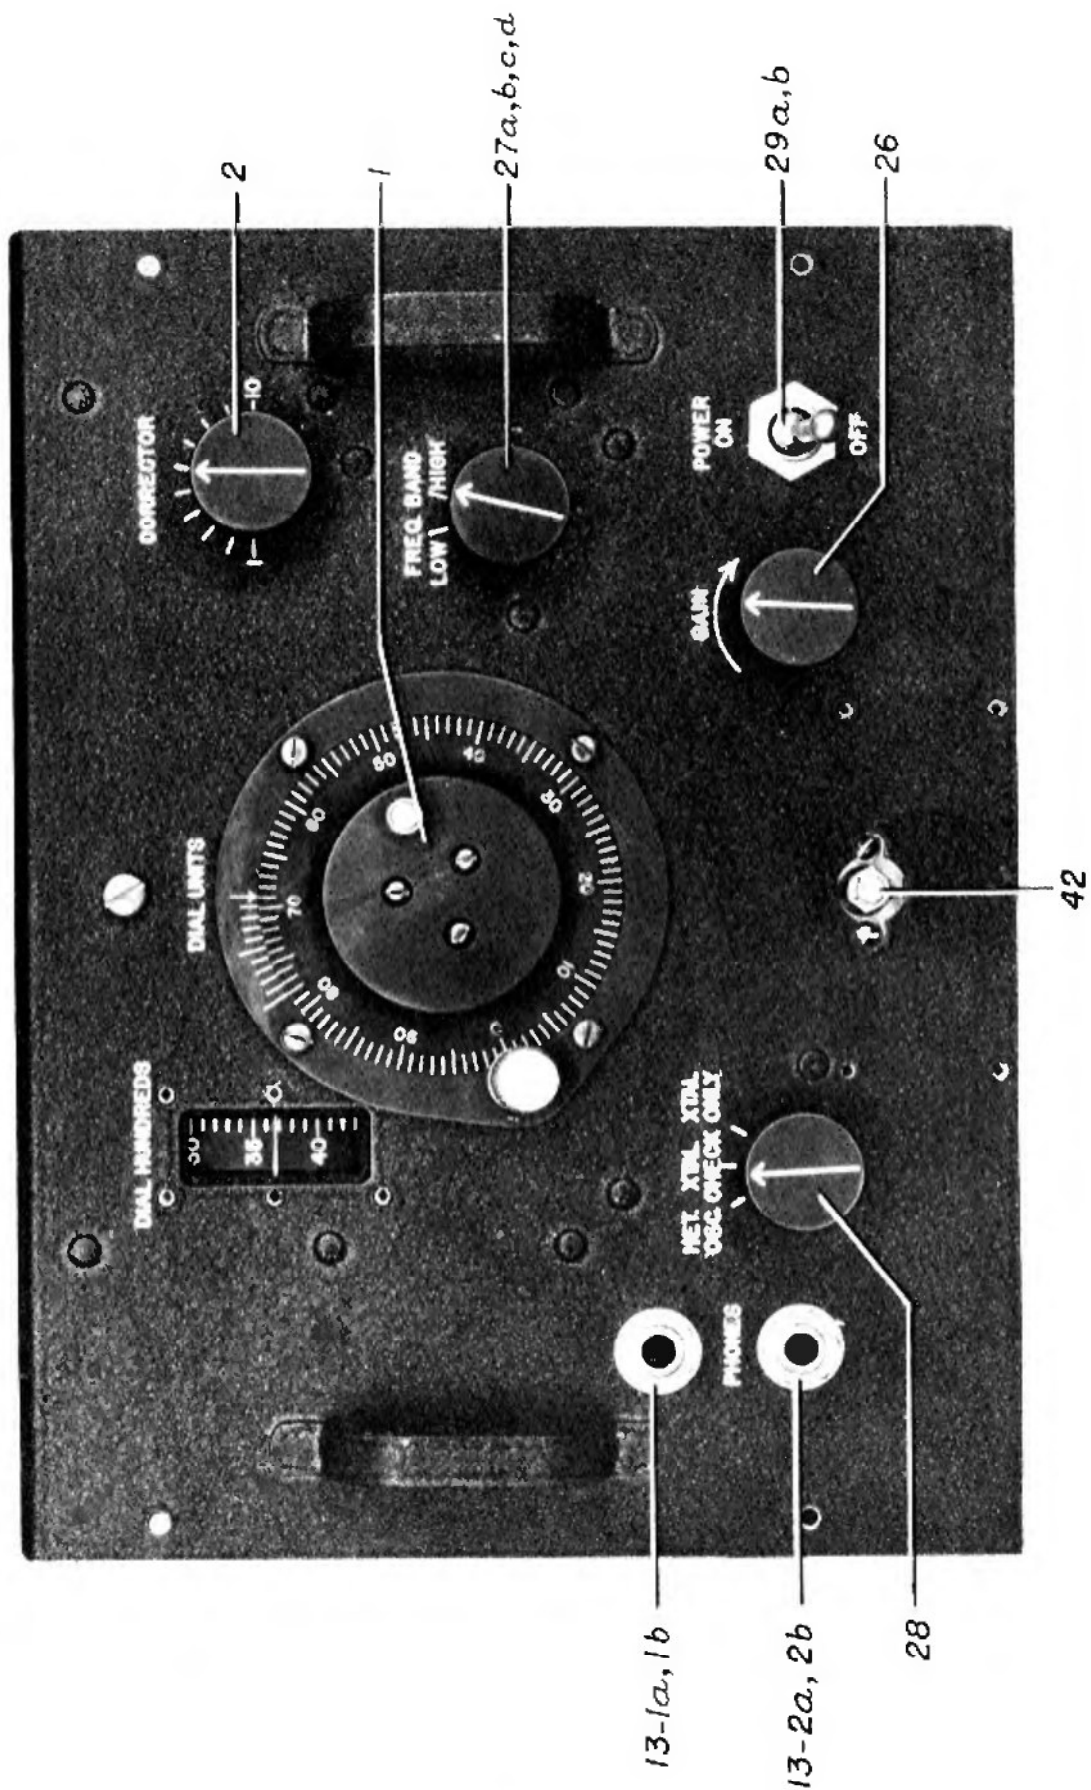


FIGURE 3 — FREQUENCY METER BC-221-M, CHASSIS, FRONT VIEW

## EMPLOYMENT

at the crystal check point nearest to the desired frequency, as explained in paragraph 8a.

(2) Turn the HET. OSC.-XTAL CHECK-XTAL ONLY switch to HET. OSC.

(3) Turn the frequency meter tuning control to the dial setting of the desired frequency, as given in the calibration book. Do not disturb the CORRECTOR capacitor adjustment as made in (1).

(4) With the frequency meter antenna loosely coupled to the transmitter output, tune the radio transmitter to give an audible beat in the headset. The approximate frequency of the transmitter must be known or must be determined.

(5) Adjust the GAIN control to obtain a comfortable signal level in the headset.

(6) Tune the radio transmitter to zero beat with the frequency meter.

(7) Note: For greater accuracy, operations (2) to (6) should be accomplished in the shortest possible interval following operation (1), otherwise changes in voltage or temperature or both, may cause the frequency meter to drift.

**11. RADIO RECEIVER ADJUSTMENTS.**—a. The method of adjusting a radio receiver to a desired frequency consists of tuning it to the proper heterodyne oscillator output frequency, and effecting the comparison by means of a headset connected to the receiver output circuit. The method varies with the character of signal reception involved, as detailed in the following subsections (1) and (2):

(1) To tune a CW radio receiver to a desired frequency, proceed as follows:

(a) Correct the heterodyne oscillator to calibration at the crystal check point nearest the desired frequency as explained in paragraph 8a.

(b) Turn the HET. OSC.-XTAL CHECK-XTAL ONLY Switch to HET. OSC., and change over to a separate headset connected to the receiver output jack. Be sure to leave the headset for the frequency meter unit inserted in one of the jacks provided, otherwise the filament circuit will be opened and the frequency meter rendered inoperative.

(c) Turn the frequency meter tuning control to the dial setting of the desired frequency, as given in the calibration book and lock the dial. Do not disturb the CORRECTOR capacitor adjustment as made in paragraph 11a(1)(a).

(d) With the frequency meter antenna loosely coupled to the radio receiver antenna lead, tune the radio receiver to give an audible signal.

(e) Adjust the radio receiver tuning to that side

of zero beat which results in best reception conditions for the particular operator concerned.

(f) Note: The notation, paragraph 10b(7) applies to this and all other operations for which the frequency meter may be employed.

(2) To tune an MCW receiver to a desired frequency, the following procedure applies:

(a) Correct the heterodyne oscillator to calibration at the crystal check point nearest to the desired frequency, as explained in paragraph 8a.

(b) Turn the frequency meter tuning control to the dial setting of the desired frequency, as given in the calibration book. Do not disturb the CORRECTOR capacitor adjustment as made in paragraph 11a(2)(a).

(c) Turn the HET. OSC.-XTAL CHECK-XTAL ONLY switch to HET. OSC.

(d) Adjust a local unmodulated radio transmitter (capable of being modulated) to zero beat with the frequency meter, proceeding as outlined in paragraphs 10b(4), 10b(5), and 10b(6).

(e) Change over to a separate headset connected to the receiver output jack, modulate the radio transmitter output, and tune the receiver for maximum undistorted response. Be sure to leave the headset for the frequency meter unit inserted in one of the jacks provided, otherwise the filament circuit will be opened and the frequency meter rendered inoperative.

**12. FREQUENCY MEASUREMENTS.**—a. Frequency Meter Set SCR-211-M may also be employed for accurately measuring a frequency emitted from an external source, whether it be of local or remote origin, provided that such frequency lies within the calibrated range. b. If it is desired to measure accurately the emitted frequency of an adjacent radio transmitter or oscillator, the frequency of which is approximately known, correct the heterodyne oscillator to the crystal check point nearest to the approximately known frequency, as explained in paragraph 8a. Determine the actual frequency (after loosely coupling the frequency meter antenna to the source and turning the HET. OSC.-XTAL CHECK-XTAL ONLY switch to HET. OSC.) by turning the frequency meter tuning control to the zero beat point found nearest the setting given for the approximate frequency, and read the actual frequency from the frequency column opposite the resultant dial setting in the calibration book.

c. If it is desired to measure accurately the emitted frequency of an adjacent radio transmitter or oscillator, the frequency of which is unknown, determine the approximate frequency with the aid of an absorption

**EMPLOYMENT**

type wave-meter, following which, determine the actual frequency as explained in paragraph 12b.

d. When it is desired to measure accurately a frequency of remote origin, first tune the signal on a radio receiver, and note the approximate frequency from the radio receiver calibration. Correct the heterodyne oscillator to calibration at the crystal check point nearest thereto. Turn the HET. OSC.-XTAL CHECK-XTAL ONLY switch to HET. OSC. Loosely couple the frequency meter antenna to the radio receiver antenna lead, and turn the frequency meter tuning control until its signal

is heard in the radio receiver headset. If the signal in question is CW in character, tune the receiver to zero beat, and tune the frequency meter to zero beat with the radio receiver. If the signal is modulated, first adjust the receiver for maximum response in the MCW condition, after which switch over for CW reception and tune the frequency meter to zero beat therewith. In both cases, the frequency read from the appropriate column in the calibration book (for the resultant frequency meter dial setting) is the frequency of the signal in question.

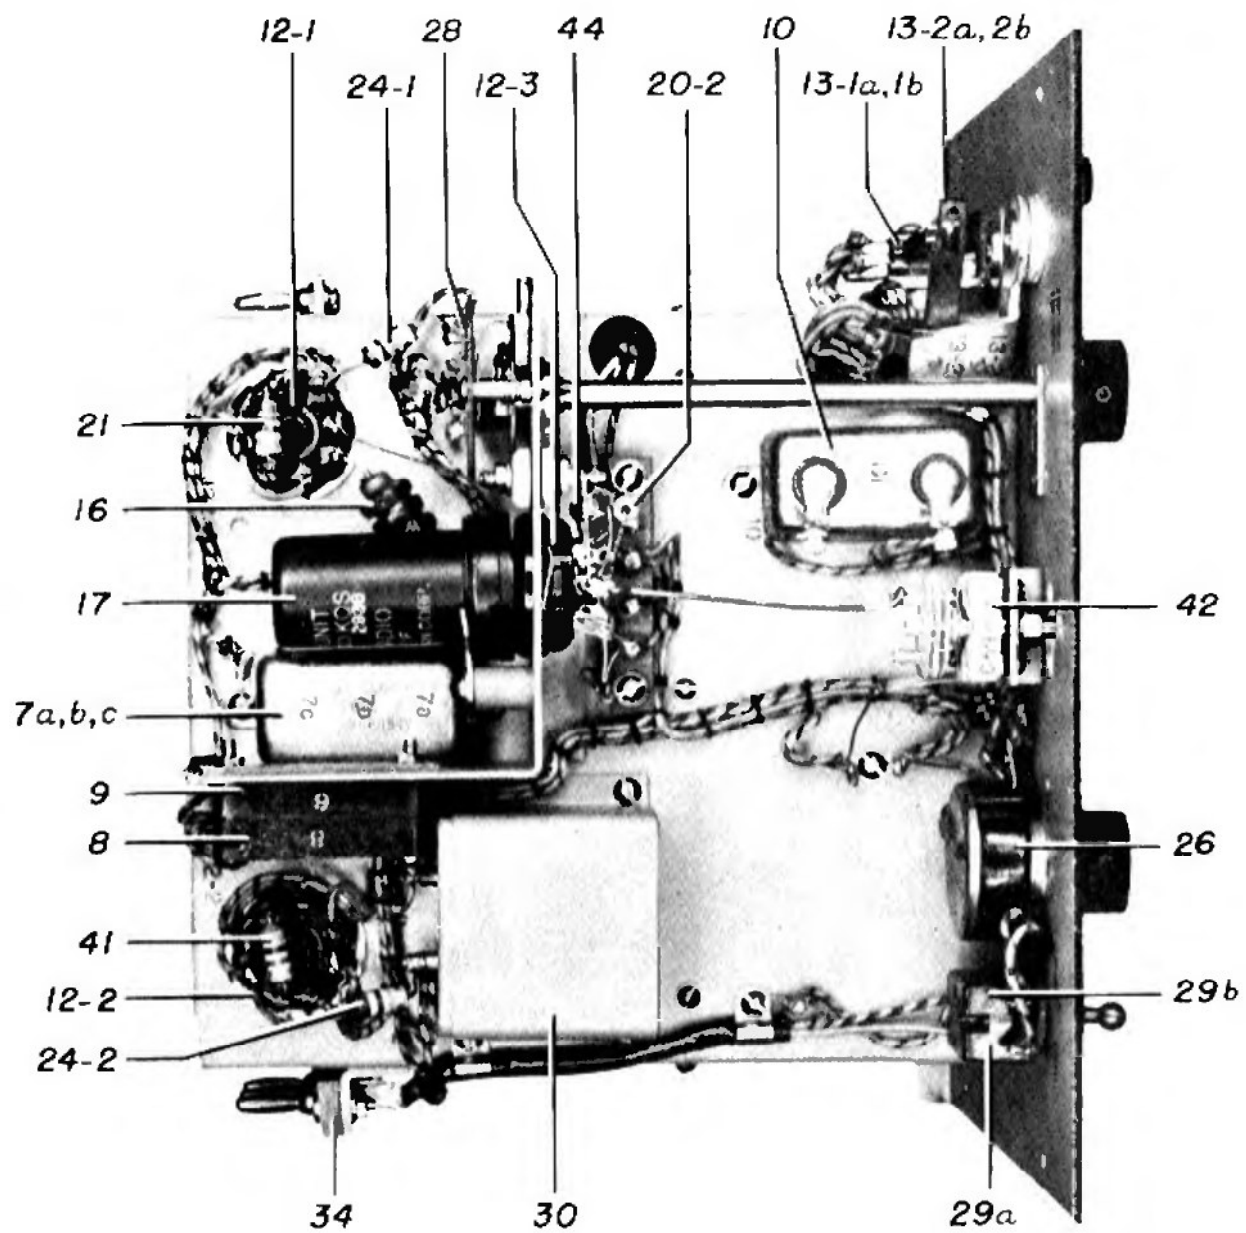


FIGURE 4 — FREQUENCY METER BC-221-M, CHASSIS, BOTTOM VIEW



## SECTION III

### FUNCTIONING OF PARTS

**13. FREQUENCY METER BC-221-M.**—*a.* Frequency Meter BC-221-M contains a crystal controlled oscillator used as a reference standard, a heterodyne oscillator having two fundamental tuning ranges which, with their useful harmonics, are calibrated to provide continuous coverage from 125 to 20,000 kcs; a high gain detector provided with means for coupling to each of three sources of excitation, and an audio frequency amplifier. There are eight operating controls, a POWER switch 29a-29b, which breaks both the filament and plate supplies; two output PHONES jacks, 13-1a and 13-2a with two filament supply switches 13-1b and 13-2b built integral therewith; a HET. OSC.-XTAL CHECK-XTAL ONLY oscillator switch 28; a two-position FREQUENCY BAND switch 27a, b, c, d for the heterodyne oscillator; the heterodyne oscillator worm and gear tuning control together with its DIAL UNITS and DIAL HUNDREDS scales; the CORRECTOR control; and the output GAIN control 26. All of these controls are mounted on the front panel of the frequency meter chassis, which is completely housed within the upper compartment of a portable aluminum cabinet in which batteries and spare parts are also carried. The removal of the nameplate from the front panel of Frequency Meter BC-221-M exposes the slotted shaft of the crystal trimmer capacitor 42, which can be adjusted if the accuracy of the crystal oscillator calibration is suspected. An antenna plug 31 and the 3-contact power input plug 34, on the chassis engage with corresponding jacks on the cabinet when the chassis is secured in place. The antenna jack 32 is connected directly to an antenna terminal post 33 on the top of the cabinet, and the power input jack 35 is connected through cabling to a battery terminal board 36 in a lower compartment. Provision is made for installing the batteries in this lower compartment, access to which may be had through a hinged door at the rear. Calibration Book MC-177-M is mounted within a dual hinged door assembly at the top front of the cabinet. This door covers the frequency meter panel when closed, and supports the calibration book at a convenient angle for use when opened (see Figure 5). The spare set of vacuum tubes and two special wrenches for the #6 and #8 Bristo setscrews used in the assembly of the equipment are stored in the spare parts compartment at the bottom front of the cabinet (see Figure 6). A rigid carrying handle is welded on the top of the cabinet and, in addition, suitable fixtures

are fastened to the sides to permit the use of a carrying Strap ST-19-A. The external surfaces are finished in a durable black wrinkle enamel. Figures 1 to 11 inclusive, show the general construction, arrangement of parts, and overall dimensions.

*b.* The cathode, triode-grid and triode-plate of Tube VT-167 (see Figure 12) constitute the active elements of the crystal controlled oscillator which operates at a frequency of 1000 kcs when the HET. OSC.-XTAL CHECK-XTAL ONLY switch 28 is placed in the XTAL CHECK and XTAL ONLY positions. The circuit is of a design which generates considerable harmonic energy in order that it may be employed to calibrate the heterodyne oscillator at several points over its entire range. If the accuracy of the crystal oscillator calibration is suspected, the crystal frequency may be adjusted by trimmer capacitor 42. The compensation provided by capacitor 42 is augmented by fixed capacitor 44, inserted in the circuit parallel with trimmer capacitor 42. The necessary plate circuit impedance is built up across an untuned inductance 16, which is

thoroughly sealed against moisture. Likewise, the crystal unit 17 is supplied in a hermetically sealed and evacuated metal holder which provides permanent protection against humidity, corrosion and dirt intrusion. One of the smaller type metal tube envelopes is employed in the construction of this holder, so that it plugs into the standard octal tube socket 12-3 in mounting. The cut of the crystal and the internal construction of the holder are such that, under any conditions of barometric pressure, humidity, voltage, vibration, shock or tilt, only the specified output frequency and the harmonics thereof are obtained. The crystal is ground for operation at a normal temperature of plus 20°C. The temperature coefficient of the combined crystal, holder, and circuit, as expressed in percentage of the frequency is less than 0.0001 per cent per degree C as measured over an ambient range of 80°.

*c.* Tube VT-116B is used in an electron coupled circuit as the heterodyne oscillator (Figure 12). As previously stated, there are two continuously variable ranges which may be manually selected by the FREQUENCY BAND switch 27a-27b-27c-27d. In the low frequency position, a fundamental range of 125 to 250 kcs is employed; which by calibrating the first, second, fourth and eight harmonics, gives continuous coverage throughout the range from 125 to 2000 kcs. In the high frequency position of 27a-27b-27c-27d, a funda-



## FUNCTIONING OF PARTS

mental range of 2000 to 4000 kcs is employed; which by calibrating the first, second, fourth and part of the fifth harmonics, gives continuous coverage throughout the range from 2000 to 20,000 kcs. The two inductors 14 and 15, in the tuned circuits, are wound on ceramic forms and thoroughly sealed against moisture. Tuning over both fundamental ranges is accomplished by a single variable capacitor 1, which is especially designed to have a low temperature coefficient, augmented by the variable corrector capacitor 2, the thermal compensator 4, inserted in the circuit parallel with capacitors 1 and 2, and the adjustable low and high frequency trimmer capacitors 3-1 and 3-2, respectively. The main tuning capacitor 1 is capable of continuous rotation in either direction without stops, and the dial assembly includes a 100/1 ratio worm gear drive mechanism so that 50 revolutions of the vernier dial are required for 180° rotation of the main scale (on the capacitor shaft). The main, or DIAL HUNDREDS scale is engraved with 50 divisions over its useful 180° sector and the DIAL UNITS scale is marked with 100 divisions over the entire 360°. The arrangement thus provides 5000 effective readable divisions, of which the calibrated ranges occupy approximately the portion between 250 and 4750 (see Figure 15). Backlash in the gear mechanism has been reduced to less than one-half of one division on the DIAL UNITS scale, and a dial lock is provided to prevent any accidental movement of the dial after the desired setting has been obtained.

d. The heterodyne oscillator circuits are calibrated at a temperature of plus 20°C, and the dial settings of the crystal check points are noted along the calibration. The temperature coefficient of each range of the heterodyne oscillator, expressed in percentage of frequency, is less than 0.008 per cent per degree C, as measured over a range of 80°C. The CORRECTOR capacitor 2, which is connected in parallel with 1, makes it possible to reset the heterodyne oscillator to agreement with the crystal calibration at any harmonic for any ambient temperature between the limits of minus 30° and plus 50°C. Thus, after the tube filaments have been lighted for at least 20 minutes, and the heterodyne oscillator has been corrected to the nearest crystal check point, the heterodyne oscillator frequency may be set and will not deviate more than 145 cycles at any point in the low frequency fundamental range nor more than 550 cycles or 775 cycles at the 2000-kc limit and the 4000-kc limit, respectively, of the high-frequency fundamental range under the most unfavorable combined influences due to  $\pm 5^\circ\text{C}$  variations in ambient tempera-

ture within the range from  $-30^\circ$  to  $+50^\circ\text{C}$ , a  $-10\%$  change in plate and/or filament voltage, errors in calibration, crystal grinding errors, and mechanical backlash, provided the heterodyne oscillator is corrected to the nearest crystal check point at intervals not exceeding 15 minutes.

e. It was previously stated that the triode portion (comprising the cathode, triode-plate and-grid) of the Tube VT-167 is used in the crystal oscillator circuit. The remaining elements of this tube, the hexode portion, (comprising the cathode, hexode grids, G1, G2, G3 and G4 and the hexode plate) are used as a high-gain screen-grid detector, to which, by structure, the crystal oscillator is electronically coupled. The r-f voltage developed across the load resistor 19 in the plate output circuit of the electron coupled heterodyne oscillator is coupled to the grid (G3) of this detector through a small fixed capacitor 5. The antenna plug 31, mounted on the chassis, is also coupled to the grid (G3) of the detector through the coupling capacitor 45 (in series with capacitor 5). As a result of these three coupling means, and dependent on the position of the HET. OSC.-XTAL CHECK-XTAL ONLY switch, the detector functions to mix the heterodyne oscillator output either with the fundamental and successive harmonics of the crystal oscillator, or with the radio transmitter frequency to be measured.

f. The detector plate works into an audio choke 30, which is bypassed by the capacitor 8, and the beat frequency voltages built up across it are coupled through capacitor 9 and the GAIN control potentiometer 26 to the control grid of Tube VT-116. The control grid of Tube VT-116 returns to ground through the potentiometer 26. The plate, screen grid and suppressor grid of Tube VT-116 return to the positive filament supply through the load resistor 24-2. The plate, screen grid and suppressor grid of Tube VT-116 are also coupled to the PHONES jacks 13-1a and 13-2a through capacitor 10, so that no d-c potentials are present in the output. The characteristics of the output circuit are such that either high-impedance (15,000 ohms) or low-impedance (2500 ohms) headsets may be used without any change-over adjustments being required.

g. The detector and audio amplifier combination is so designed that the output impressed across the phones is essentially a linear function of the input voltage for the output range of 1.0 to 6.0 milliwatts (beat frequency of 300 cycles). Regardless of whether the heterodyne oscillator is beating with energy from an external

## FUNCTIONING OF PARTS

source of radio frequency or with the crystal calibrator, the following minimum outputs will be available:

Beat Note Frequency	Output
100 Cycles	2.8 Milliwatts
500 Cycles	6.0 Milliwatts
1000 Cycles	3.0 Milliwatts

h. It was previously stated that the antenna plug 31 is coupled to the grid (G3) of the detector through capacitors 45 and 5 respectively, in series. By further reference to Figure 12, it will be seen that the antenna plug 31 is also coupled directly to the heterodyne oscillator output through capacitor 45 alone. Thus, the antenna post 33 serves the dual purpose of a detector input terminal for the measurement of frequencies of external origin and of a heterodyne oscillator output terminal for use in calibrating receivers. When the unit is employed for the latter purpose, 2000 microvolts or more of radio frequency energy will be available between the antenna terminal and ground (the chassis) at any frequency within the calibrated range.

i. All power required for the operation of this unit is introduced through the battery terminal board 36. The common negative filament and negative plate battery leads are connected to the middle terminal thereof, which is grounded to the chassis. A fabricated wiring harness is provided for intercell and filament battery to terminal board connections. The section 29a of the POWER switch closes the positive 6-volt supply terminal (A+) to the vacuum tube filaments

through the auxiliary switches 13-1b and 13-2b (when the headset plugs are inserted into the PHONES jacks); and section 29b connects the positive 135-volt supply terminal (B+) to all plate and screen circuits. Since the door assembly containing the calibration book cannot be closed when the headset plug is in place, the A batteries cannot be inadvertently discharged when the set is decommissioned, even if the power switch is left in the ON position.

j. By reason of extreme refinements involving the type and design of the basic circuits, the relative arrangement of parts, character of intercircuit couplings, shielding, etc., the performance of this unit has been developed to a degree where no "locking in" will occur between the heterodyne oscillator and any source of r-f with which it may be coupled, at any difference or beat frequency down to 5 cycles per second in the low fundamental range or down to 50 cycles per second in the high fundamental range. Although the phones become rapidly less efficient in audibly reproducing beat tones below 100 cycles per second, characteristic "rushes" coincident with the rise and fall of the beat frequency pulses are aurally recognizable well below the low frequency limit of audibility.

**14. VACUUM TUBES.**—The vacuum tubes employed in this equipment, and their maximum operating characteristics, are shown in the following tabulation:

Reference Designation: Function:	VT-116-B Heterodyne Oscillator	VT-167 Crystal Osc. and Detector	VT-116 AF Amplifier
Type:	Triple-Grid Amplifier	Triode-Hexode Converter	Triple-Grid Amplifier
Signal Corps Type Nomenclature:	Tube VT-116-B	Tube VT-167	Tube VT-116
Nearest Com'l. Equivalent:	6SJ7Y	6K8	6SJ7
Base:	Small	Small	Small
Heater Voltage ( $E_f$ ):	8 pin	8 pin	8 pin
Control Grid Voltage ( $E_{c1}$ ):	6.3v	6.3v	6.3v
Screen Voltage ( $E_{c2}$ ):	−3.0v	−3.0v	−3.0v
Plate Voltage ( $E_{p1}$ ):	100v	100v	100v
Triode Plate Voltage:	250v	250v	250v
Heater Current ( $I_f$ ):	100v	100v	100v
Screen Current ( $I_{c2}$ ):	300 ma	300 ma	300 ma
Plate Current ( $I_{p1}$ ):	0.8 ma	6 ma	0.8 ma
Triode Plate Current:	3 ma	2.5 ma	3 ma
Transconductance ( $S_m$ ):	.	3.8 ma	.
	1650		1650

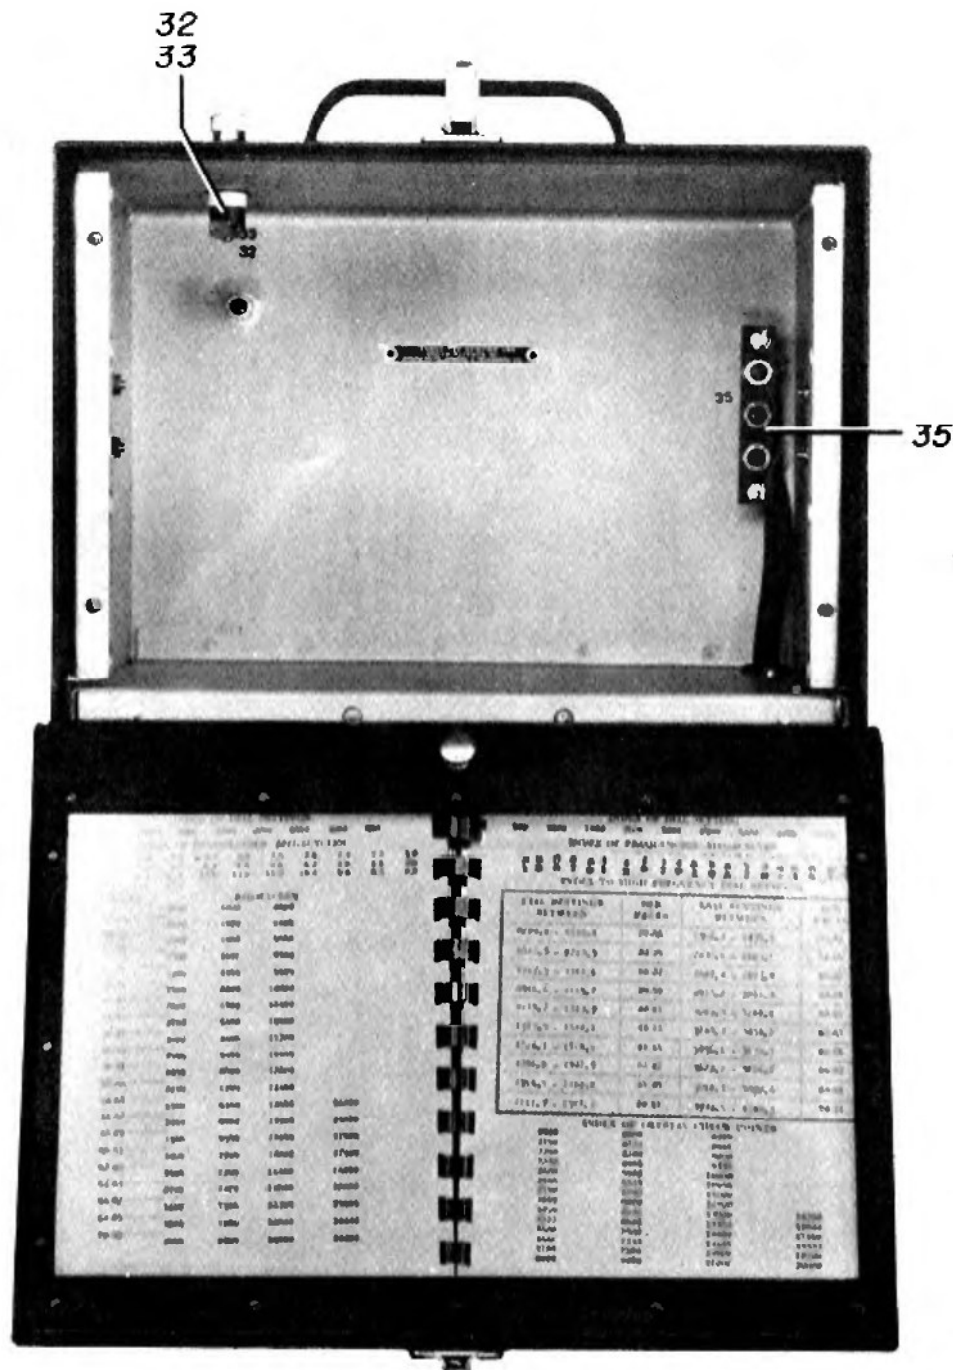


FIGURE 5 — FREQUENCY METER BC-221-M, FRONT VIEW WITH CHASSIS REMOVED

## FUNCTIONING OF PARTS

**15. CALIBRATION BOOK MC-177-M.**—The low frequency fundamental range of the heterodyne oscillator is calibrated at each one-tenth kilocycle between 125 and 250 kcs, or a total of 1251 points. Likewise, the high frequency fundamental range is calibrated in increments of one kilocycle between 2000 and 4000 kcs, or a total of 2001 points. These fundamental frequencies are legibly printed in columnar formation on the successive pages of the calibration book, together with associated columns listing the second, fourth and eighth harmonics thereof for the low range, and the second, fourth, and portions of the fifth harmonics for the high range. The dial settings, as determined by individual calibration, are then typed in opposite each such group. All figures representative of ordinary frequencies and their dial settings are both printed and typed in black while those which refer to the crystal oscillator and its harmonics (crystal check points) are shown in red. The first and last frequencies and dial settings tabulated thereon are indicated across the top. There are 70 inside pages (including pages 3 to 72) thumb tabbed as to page number. In the front of the calibration book opposite page 3 is an index to the dial settings in the low range. The page facing page 72 in the back of the book contains a similar listing for the high range. In addition, an index of frequencies in the high range is printed on pages 30 and 31, and another for the low

frequency range is given on pages 28 and 29. A brief summary of the essential steps in operating the equipment is given on page 72. The calibration is printed on high quality white rag index paper which is both oil- and waterproof. The printed cover boards, especially selected for durability, are augmented by sheet metal covers, each of which is fitted with three threaded metal inserts for securing the book in open position within the door assembly of the frequency meter cabinet. A spiral spring type of binding is employed, so that the book lies flat when opened to any page.

The calibration should be carefully preserved, as the cost of duplication constitutes an appreciable percentage of the total cost of the equipment.

**16. BAG BG-81-D.**—The carrying bag (see Figure 1) is designed to include all components of the Frequency Meter Set SCR-211-M. It is fabricated from hard texture olive-drab duck, the bottom being felt padded and the inner and outer walls reinforced with pigskin at the wear-points. The top is hinged at the rear, with overhanging sides and front to exclude dust and precipitation. This cover is fitted with webbing straps so that it may be conveniently secured by buckles on the front of the bag, and a similarly secured pocket is provided on the top for a headset. Suitable rings are secured with webbing to each side of the bag, to which an adjustable Strap ST-19-A may be attached


SECTION IV  
MAINTENANCE

**17. GENERAL.**—Frequency Meter BC-221-M is ruggedly constructed to withstand the shocks and strains which may be expected in military service. Nevertheless, this equipment is extremely accurate and sensitive, and is therefore deserving of the careful handling normally accorded to precision instruments.

**18. SERVICING.**—Normally, the only servicing required should be the replacement of batteries and vacuum tubes. This should be done at regular intervals, dependent on the amount of usage to which the equipment is subjected.

**19. RESISTORS AND CAPACITORS.**—The cartridge resistors and small moulded capacitors supplied in this equipment are marked in accordance with the following RMA Standard Color Code.

Band B indicates the second significant figure.  
Band C indicates the decimal multiplier.  
Band D, if any, indicates the tolerance limits about the nominal resistance value.  
The less common system used for indicating nominal resistance value is as follows:

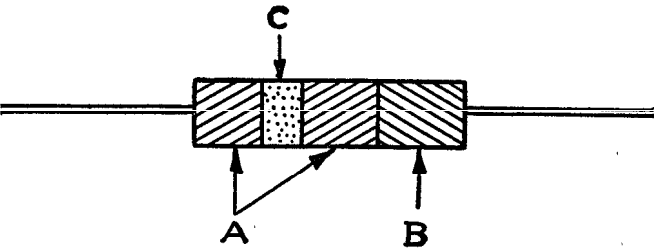


The body (A) of the resistor is colored to represent the first significant figure of the resistance value.

RMA COLOR CODE FOR RESISTORS AND CAPACITORS

Color	Significant Figure	Decimal Multiplier	Tolerance	Voltage Rating
Black	0	1	..	..
Brown	1	10	1%	100 Volts
Red	2	100	2%	200 Volts
Orange	3	1,000	..	300 Volts
Yellow	4	10,000	..	400 Volts
Green	5	100,000	5%	500 Volts
Blue	6	1,000,000	..	600 Volts
Violet	7	10,000,000	..	700 Volts
Gray	8	100,000,000	..	800 Volts
White	9	1,000,000,000	..	..
Gold	..	0.1	±5%	..
Silver	..	0.01	±10%	..
No Color	..	..	±20%	500 Volts

RESISTORS

The nominal resistance value of fixed composition resistors is indicated in two manners. The one in most common use indicates the value by bands of color as follows:

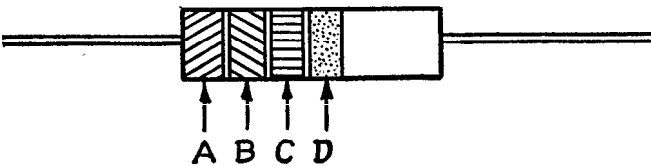

Band A indicates the first significant figure of the resistance of the resistor.

One end (B) is colored to represent the second significant figure and a band, or dot (C) of color, located within the body color, indicates the decimal multiplier.


CAPACITORS

Two systems for color coding small fixed capacitors are in use. In either case, capacity is expressed in micromicrofarads and some means to avoid ambiguity in interpretation of colors provided. An arrow pointing from left to right or the manufacturer's name is generally used.

In general, capacitors having a working voltage of 500 volts are coded by means of three dots of color as

## MAINTENANCE

**follows:**

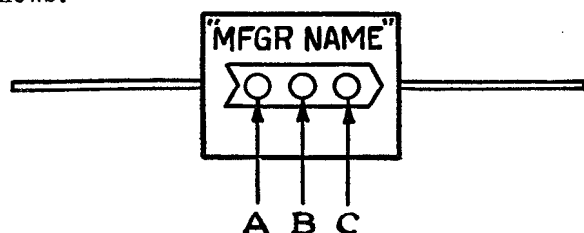


Dot A indicates the first significant figure of the capacitance of the capacitor.

Dot B indicates the second significant figure.

Dot C indicates the decimal multiplier.

An additional dot is sometimes shown when the working voltage is other than 500 volts. This dot indicates the voltage rating of the condenser.

A second system now coming into common use involves six dots of color as follows:

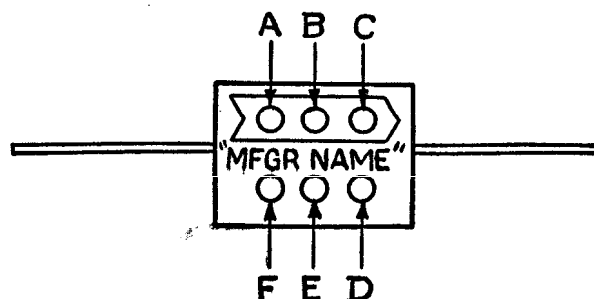

Dot A indicates the first significant figure of the capacitance of the capacitor.

Dot B indicates the second significant figure.


Dot C indicates the third significant figure.

Dot D indicates the decimal multiplier.

Dot E indicates the tolerance about the nominal capacitance value.

**Dot F** indicates the voltage rating of the capacitor.

**20. TUBE VOLTAGES.**—The following diagram, showing vacuum tube terminal voltages with respect to ground (chassis), is typical for Frequency Meter BC-221-M, with 6.0-volt filament and 135-volt plate supply, GAIN control set at maximum:

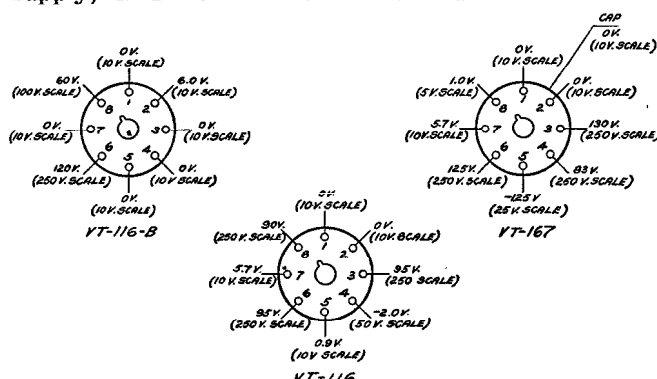

NOTE: The above values were obtained with a voltmeter having a resistance of 1000-ohms per volt, with a headset plugged into the PHONES jack and the various switches on Frequency Meter BC-221-M set to the following positions:

Switch	Position
FREQ. BAND	LOW
CRYSTAL	XTAL CHECK
POWER	ON

## 21. READJUSTMENT OF CRYSTAL TRIMMER CAPACITOR.—*a.—Procedure.*—If the accuracy of

**CAPACITOR.**—*a.*—*Procedure.*—If the accuracy of the crystal oscillator calibration is suspected, check the frequency meter unit against a frequency standard whose accuracy is better than  $\pm 1$  part per million (Radio Station WWV of the U. S. Bureau of Standards, or a laboratory primary frequency standard). To accomplish this comparison:

- (1) Set the HET. OSC.-XTAL CHECK-XTAL ONLY switch to XTAL ONLY, plug a headset in either of the PHONES jacks and throw the POWER switch ON. Allow the frequency meter to warm up for at least twenty minutes.

- (2) Tune a radio receiver to Station WWV or to the frequency standard (tune the receiver to 1 mc or a multiple thereof).

- (3) Couple a lead from the antenna terminal on the frequency meter to the antenna lead of the radio receiver. A beat-note should be heard in the radio receiver headset.

- (4) Compare the beat-note produced in the radio receiver with an accurately calibrated beat-frequency oscillator and determine its frequency.

- (5) Convert the beat-frequency to frequency deviation at 1 megacycle. The permissible deviation is  $\pm 5$  cycles at 1 megacycle.

- (6) If the observed deviation exceeds this tolerance, remove the nameplate from the front panel of Frequency Meter BC-221-M. Removal of the nameplate exposes the slotted shaft of the crystal trimmer capacitor.

- (7) Using a small screwdriver, rotate the capacitor a fraction of a turn. This capacitor permits a total variation in crystal frequency of approximately 15 cycles.

- (8) Check the deviation in crystal frequency as described in the preceding subparagraphs (4) and (5).

- (9) Repeat the operations described in subparagraphs (7) and (8) until the deviation is less than  $\pm 5$  cycles at 1 megacycle.

- (10) Replace the nameplate.

## MAINTENANCE

*b. Numerical Example.*—(1) The following example will assist the reader to understand the foregoing instructions. If a 5-megacycle standard frequency transmission of Station WWV is used as a reference, tune the radio receiver to this frequency. The crystal fundamental frequency is 1 megacycle and its fifth harmonic will beat against the 5-megacycle signal. Suppose, under this condition, a beat frequency of 35 cycles is produced. Since this beat is produced by the fifth harmonic, the resultant beat-frequency must be divided by the order of the harmonic to convert the deviation to frequency deviation at 1 megacycle. In this instance, divide 35 cycles (resultant beat-frequency) by 5 (order of harmonic), the quotient of which is 7 cycles. Since this deviation is in excess of the allowable tolerance, adjust the crystal trimmer capacitor to produce a beat-frequency less than 25 cycles at 5 megacycles.

### 22. TROUBLE LOCATION AND REMEDY DATA.—

*a.* If Frequency Meter BC-221-M fails to operate, the following procedure should be followed to determine and eliminate the cause of failure.

- (1) Check the operating control settings and position of the knobs on their respective shafts.
- (2) Check the headset by removing and inserting in the phone jack. A click should be heard in the headset when inserted in the circuit.
- (3) Check the operation of the heterodyne oscillator by introducing an external signal of known frequency. A beat-note should be heard in the headset when the heterodyne oscillator is tuned to this frequency. This same procedure applies to either band.
- (4) If the heterodyne oscillator is operating satisfactorily, check the crystal oscillator circuit operation by setting the heterodyne oscillator to a crystal check point and turning the crystal switch on and off. A beat-note should be heard in the headset when the crystal is turned on. If no beat-note is heard, set the frequency band switch to the other band, set the heterodyne oscillator to a crystal check point, and repeat the operation described above. If no beat-note is heard under either condition, the crystal oscillator circuit is inoperative.

*b.* If no indication of operation is noted from the above checks, remove the unit from the case and check the battery potentials on the jack strip 35 in the rear of the case. The voltages should check to within the following limits:

A—B— to B+	121.5 to 135 volts d-c
A—B— to A+	5.4 to 6.0 volts d-c

*c.* If the voltages check within specified limits and the equipment still does not operate, interconnect the jack strip 35 with the plug strip 34 by means of a patch cord, and set up the unit for operation outside its case. Follow the following procedure to locate and isolate the cause of failure.

- (1) With the gain control set to maximum (full clockwise rotation) touch the center lug of the gain control 26 with the point of a screwdriver. A click or hum should be heard in the headset.
- (2) Repeat above procedure touching the grid cap of Tube VT-167. A click or hum should again be heard in the headset.

*d.* If trouble is indicated by one of the above checks, replace the tube in the circuit in which trouble is indicated and repeat the procedure. If the trouble still persists, check the tube socket terminal voltages of the tubes. These values should check to within  $\pm 10\%$  of the values given in paragraph 20. Should any of the tube socket terminal voltages be outside of the required limits, disconnect the set and check the circuit components.

*e.* If, after a defect has been localized, the circuit components found to be in good condition, the unit is still not functioning properly, check the wiring for continuity. Inspect the unit for broken or frayed insulation in the wiring, and loose or corroded connections to the components. Check the switch, jack, plug, and tube socket contacts for loose or corroded connections. Check the tube socket clamps for tightness. If the unit functions normally except that the output is below normal, check the residual magnetism of the headphones. There should be enough residual magnetism present to hold the diaphragm in place when the retaining cap is removed and when no current is flowing through the phones.

## SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS

SECTION V.—SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS  
23. TABLE OF REPLACEABLE PARTS

Ref. No.	Stock No.	Name	Description	Function	Mfr.	Drawing Numbers Bendix Sig. Corp.
1		Capacitor	10-185 $\mu$ f, Variable, Air dielectric	Heterodyne Tuning	3	AL73588-1
2		Capacitor	3 $\mu$ f, Variable, Air dielectric	Heterodyne Corrector	9	AA18927-1
3-1		Capacitor	10 $\mu$ f, Adjustable, Air dielectric	L.F. Heterodyne Trimmer	10	C59400
3-2		Capacitor	10 $\mu$ f, Adjustable, Air dielectric	H.F. Heterodyne Trimmer	10	C59400
4		Capacitor	5 $\mu$ f, $\pm 10\%$ , Ceramic, 500v, dew	Heterodyne Compensating	7	A107158-050
5		Capacitor	8 $\mu$ f, $\pm 10\%$ , 500v dew, Molded mica	Heterodyne Coupling	1	C56315-080
7a		Capacitors	0.1 x 0.1 x 0.1 $\mu$ f + 14% -6%, 200v dew, Paper dielectric, Wax impregnated	Crystal Anode, Detector Screen Bypass	1	A18933-1
7b		Capacitors	0.001 $\mu$ f $\pm 10\%$ , 600v dew, Molded mica	Detector Plate Bypass	1	A18936-1
7c		Capacitors	0.02 $\mu$ f $\pm 10\%$ , 600v dew, Molded mica	Audio Input Coupling	1	A18936-2
8		Capacitor	0.5 $\mu$ f $\pm 12\%$ , 200v dew, Paper dielectric, Wax impregnated	Audio Output Coupling	1	A18932-1
9		Capacitor				
10		Capacitor				
11		Socket	8 Contact, Octal, Isolantite	For Tube VT-116B	2	A18168-6
12-1		Socket	8 Contact, Octal	For Tube VT-167	2	A18955-7
12-2		Socket	8 Contact, Octal	For Tube VT-116	2	A18955-7
12-3		Receptacle	8 Contact, Octal	Crystal	2	A18955-7
13-1(a)		Jack	Single circuit,	Telephone	11	A18946
13-1(b)		Switch	Filament Control	Filament Switch	11	A18946
13-2(a)		Jack	Single circuit,	Telephone	11	A18946
13-2(b)		Switch	Filament Control	Filament Switch	11	A18946
14		Inductor	Assembly, for details see Note (1)	(1) Heterodyne High Frequency	3	AL73573-1
15		Inductor	Assembly, for details see Note (2)	(1) Heterodyne Low Frequency	3	AL73577-1
16		R.F. Choke	844 microhenries $\pm 5\%$ Universal winding	Crystal Anode Plate	3	AA107310-1
17		Crystal	Assembly, for details see Note (3)	Unit	3	AL73580
18		Resistor	56000 $\pm 10\%$ , $\frac{1}{4}$ w, Metallized, Insulated	R.F. Output Terminating	7	A18151-562
19		Resistor	56,000 $\Omega \pm 10\%$ , $\frac{1}{4}$ w, Metallized, Insulated	Heterodyne Plate	7	A18151-563
20-1		Resistor	1.0 Megohm $\pm 10\%$ , $\frac{1}{4}$ w, Metallized, Insulated	Detector Grid Leak	7	A18151-105
20-2		Resistor	1.0 Megohm $\pm 10\%$ , $\frac{1}{4}$ w, Metallized, Insulated			
21		Resistor	150 $\Omega \pm 10\%$ , $\frac{1}{4}$ w	Crystal Oscillator Grid	7	A18151-105
22		Resistor	9100 $\Omega \pm 5\%$ , $\frac{1}{4}$ w	Crystal Oscillator Cathode	7	A18151-151
23		Resistor	150,000 $\Omega \pm 10\%$ , $\frac{1}{4}$ w	Heterodyne Screen Dropping	7	A18001-912
24-1		Resistor	15,000 $\Omega \pm 10\%$ , $\frac{1}{4}$ w, Metallized, Insulated	Heterodyne Oscillator Grid	7	A18151-154
		Resistor		Detector Screen	7	A18151-153



## SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS

SECTION V.—SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS—(Concluded)  
23. TABLE OF REPLACEABLE PARTS—(Concluded)

Ref. No.	Stock No.	Name	Description	Function	Mfr.	Drawing Numbers Bendix Sig. Corp.
24-2		Resistor	15,000Ω ±10%, ¼w, Metallized, Insulated	Audio Plate Load	7	A18151-153
26		Potentiometer	500,000Ω ±10%, 1w, Impregnated Strip, Curve No. 1	Gain Control	5	A18948
27		Switch	4 PDT Rotary	Frequency Band	10	C59061
28		Switch	SP3T Rotary	Crystal	10	C59302
29		Switch	DPST (On-Off) Toggle	Power	6	A106346
30		Reactor	450h ±10% at 1.0 Milliamperes d.c.	Audio Choke	3	AA16938-1
31		Plug	Single contact	Antenna	3	A18986
32, 33		Terminal	Screw plunger type, Assembly. For de- tails see Note (4)	Antenna Post	4	A10236
34		Plug	3 Contact	Power Input	3	AA18994-1
35		Jack	3 Contact	Power Input	3	AA25002-1
36		Terminal Board	3 Contact, Screw Terminals	Battery	3	AA25732
37		Resistor	7500Ω ±10%, ¼w	L.F. Heterodyne Grid Coupling	7	A18151-752
38		Resistor	100Ω ±10%, ¼w	H.F. Heterodyne Grid Coupling	7	A18151-101
39		Capacitor	.001 μf ±10%, 500v dcw, Molded mica	Filament Bypass	1	C56315-102
40		Capacitor	100 μf ±10%, 500v dcw, Molded mica	Heterodyne Grid Coupling	1	C56315-101
41		Resistor	300Ω ±10%, ¼w	Audio Cathode	7	A18151-301
42		Capacitor	12 μf, Adjustable, Air dielectric	Crystal Oscillator Trimmer	9	C59209
43a, 43b		Capacitor	0.1 x 0.1 μf, 200v dcw, +14% -10%, Paper, Dielectric, Wax impregnated	Het. Screen & Plate Bypass	1	C59099
44		Capacitor	5 μf ±1.0 μf, Ceramic, 500v dcw	Crystal Oscillator Padder	7	A109935-050
45		Capacitor	15 μf ±10%, 500v dcw, Molded mica	Antenna Coupling	1	C56315-150
46		Capacitor	47 μf ±10%, 500v dcw, Mica, wax imp.	Antiresonant Shunt	7	A103772-470
VT-116		Tube	Triple grid detector amplifier	Audio Amplifier	12	.
VT-116B		Tube	Triple grid detector amplifier	Heterodyne Oscillator	12	.
VT-167		Tube	Triode-Hexode converter	Crystal Oscillator and Detector	12	.
		Grid Clips	Spring type	VT-167	18	A25590
		Knob	Knurled grip	Corrector	3	AC59469-1
		Knob	Knurled grip	Band Switch	3	AC59469-1
		Knob	Knurled grip	Volume Control	3	AC59469-1
		Knob	Knurled grip	Crystal Switch	3	AC59469-1
		Ring Assembly	Mounting plate, Two used	For Fastening Dee Ring to Cabinet	3	A11756
		Ring Assembly	Dee ring, Two used	For Fastening Strap ST-19-A to Cabinet	3	A10363
		Box Catch	Self locking type		8	A10242

# SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS

Bushings	Isolantite, Used in pairs	Feed Through	13	A11319	
Supports	Isolantite, Used in pairs	Wire	13	A1693	
Plugs	Banana type, Part of Ref. No. 34, Three used	Power	14	.	
Jacks	For banana plugs, Part of Ref. No. 35, Three used	Power	14	.	
Wire	Lenz r-f	Hook-up	15	.	
Cable	Rubber covered, Single conductor #18	Battery	16	A8848-1	
Terminals	Single connector, Three used	Battery	17	A7737	
<b>Dwg. No.</b>					
Note No. (1)		Adjustable Electrode			AA107450
Heterodyne Oscillator High Frequency	AL73578-1	Crystal, 1 mc A-cut			A29426
Coil Assembly, Wax Impregnated		Fixed Electrode			A106868
Coil Form, Isolantite	L73576	Shell, 6C5 Tube Type			A106890
Wire, #7-42 Litz Single Celanese Enameled	A326	Header, Metal Tube, One Lead Base, Octal Tube			A3178
<b>Note No. (2)</b>					
Heterodyne Oscillator Low Frequency	AL73577-1	Note No. (4)			
Coil Assembly, Wax Impregnated		Spring			A25606
Coil Form, Isolantite	L73575	Spacer			A7254-1
Mounting Block	A1697	Guide Pin			A7255
Wire, 7-42 Litz Single Celanese Enameled	A326	Post, Screw Plunger Type			A10236
		Bushing, Isolantite, Pair			A18945
		Washer, Untreated, Fishpaper			A25046-1
		Washer, Untreated, Fishpaper, Pair			A10859-1
Note No. (3)	AL73580				
Crystal Unit Assembly, DC-9-M					

## 24. IDENTICAL AND INTERCHANGEABLE PARTS

Ref. No.	Stock No.	Name	Description	Function	Mfr.	Drawing Numbers Bendix Sig. Corp.
3-1		Capacitor	10 $\mu$ f, Adjustable, Air dielectric	L.F. Heterodyne Trimmer	10	C59400
3-2		Capacitor	10 $\mu$ f, Adjustable, Air dielectric	H.F. Heterodyne Trimmer	10	C59400
12-1		Socket	8 Contact, Octal	For Tube VT-167	2	A18955-7
12-2		Socket	8 Contact, Octal	For Tube VT-116	2	A18955-7
12-3		Receptacle	8 Contact, Octal	Crystal	2	A18955-7
13-1(a)		Jack	Single circuit,	Telephone	11	A18946
1(b)		Switch	Filament Control	Filament Switch	11	A18946
13-2(b)		Jack	Single circuit,	Telephone	11	A18946
2(b)		Switch	Filament Control	Filament Switch	11	A18946
20-1		Resistor	1.0 Megohm $\pm$ 10%, $\frac{1}{4}$ w, Metallized, Insulated	Detector Grid Load	7	A18151-105
20-2		Resistor	1.0 Megohm $\pm$ 10%, $\frac{1}{4}$ w, Metallized, Insulated	Crystal Oscillator Grid	7	A18151-105
24-1		Resistor	15,000 $\Omega$ $\pm$ 10%, $\frac{1}{4}$ w, Metallized, Insulated	Detector Screen	7	A18151-153
24-2		Resistor	15,000 $\Omega$ $\pm$ 10%, $\frac{1}{4}$ w, Metallized, Insulated	Audio Plate Load	7	A18151-153

SUPPLEMENTARY DATA AND LIST OF REPLACEABLE PARTS

24. IDENTICAL AND INTERCHANGEABLE PARTS—(Concluded)

Ref. No.	Stock No.	Name	Description	Function	Mfr.	Drawing Numbers Bendix Sig. Corp.
		Knob	Knurled grip	Corrector	3	AC59469-1
		Knob	Knurled grip	Band Switch	3	AC59469-1
		Knob	Knurled grip	Volume Control	3	AC59469-1
		Knob	Knurled grip	Crystal Switch	3	AC59469-1
		Ring Assembly	Mounting Plate, Two used	For Fastening Dee Ring to cabinet	3	A11756
		Ring Assembly	Dee Ring, Two used	For Fastening Strap ST-19-A to Cabinet	3	A10363
		Bushings	Isolantite, Used in pairs	Feed Through	13	A11319
		Supports	Isolantite, Used in pairs	Wire	13	A1693
		Plugs	Banana type, Part of Ref. No. 34, Three used	Power	14	
		Jacks	For banana plugs, Part of Ref. No. 35, Three used	Power	14	
		Terminals	Single connector, Three used	Battery	17	A7737

25. ADDRESSES OF MANUFACTURERS

- |   |   |  |
|---|---|--|
| 1. Aerovox Corporation<br>New Bedford, Mass.  | 9. Hammarlund Mfg. Co.<br>424 W. 33rd Street<br>New York, N. Y.     | 17. Howard B. Jones<br>2300 Wabansia Avenue<br>Chicago, Illinois.        |
| 2. American Phenolic Corp.<br>1830 South 54th Avenue<br>Chicago, Ill. (Cicero P.O.) | 10. Oak Mfg. Co.<br>711 W. Lake Street<br>Chicago, Ill.             | 18. Zierick Mfg. Co.<br>385 Gerard Avenue<br>New York, N. Y.             |
| 3. Bendix Radio<br>Div. of Bendix Aviation Corp.<br>Baltimore, Maryland.            | 11. Yaxley Mfg. Co.<br>3029 E. Washington St.<br>Indianapolis, Ind. | 19. Zophar Mills, Inc.<br>100 26th Street<br>Brooklyn, N. Y.             |
| 4. Eby, Inc.<br>2066 Hunting Park Avenue<br>Philadelphia, Pa.                       | 12. R.C.A. Mfg. Co.<br>Camden, N. J.                                | 20. Acme Wire Company<br>New Haven, Conn.                                |
| 5. Centralab<br>900 Keefe Avenue<br>Milwaukee, Wis.                                 | 13. Isolantite Corp.<br>Belleville, N. J.                           | 21. Bakelite Corp. of America<br>247 Park Avenue<br>New York City, N. Y. |
| 6. Arrow-Hart and Hegeman<br>Hartford, Conn.  | 14. Johnson Co.<br>Waseca, Minn.                                    | 22. Raytheon Prod. Co.<br>190 Willow Street<br>Waltham, Mass.            |
| 7. Erie Resistor Corp.<br>Erie, Penna.  | 15. Lenz Co.<br>1751 N. Western Avenue<br>Chicago, Ill.             | 23. Westinghouse Elect. and<br>Mfg. Company<br>East Pittsburgh, Penna.   |
| 8. Excelsior Hardware Co.<br>Stamford, Conn.  | 16. Simplex Wire & Cable Co.<br>79 Sidney Street<br>Boston, Mass.   |  |



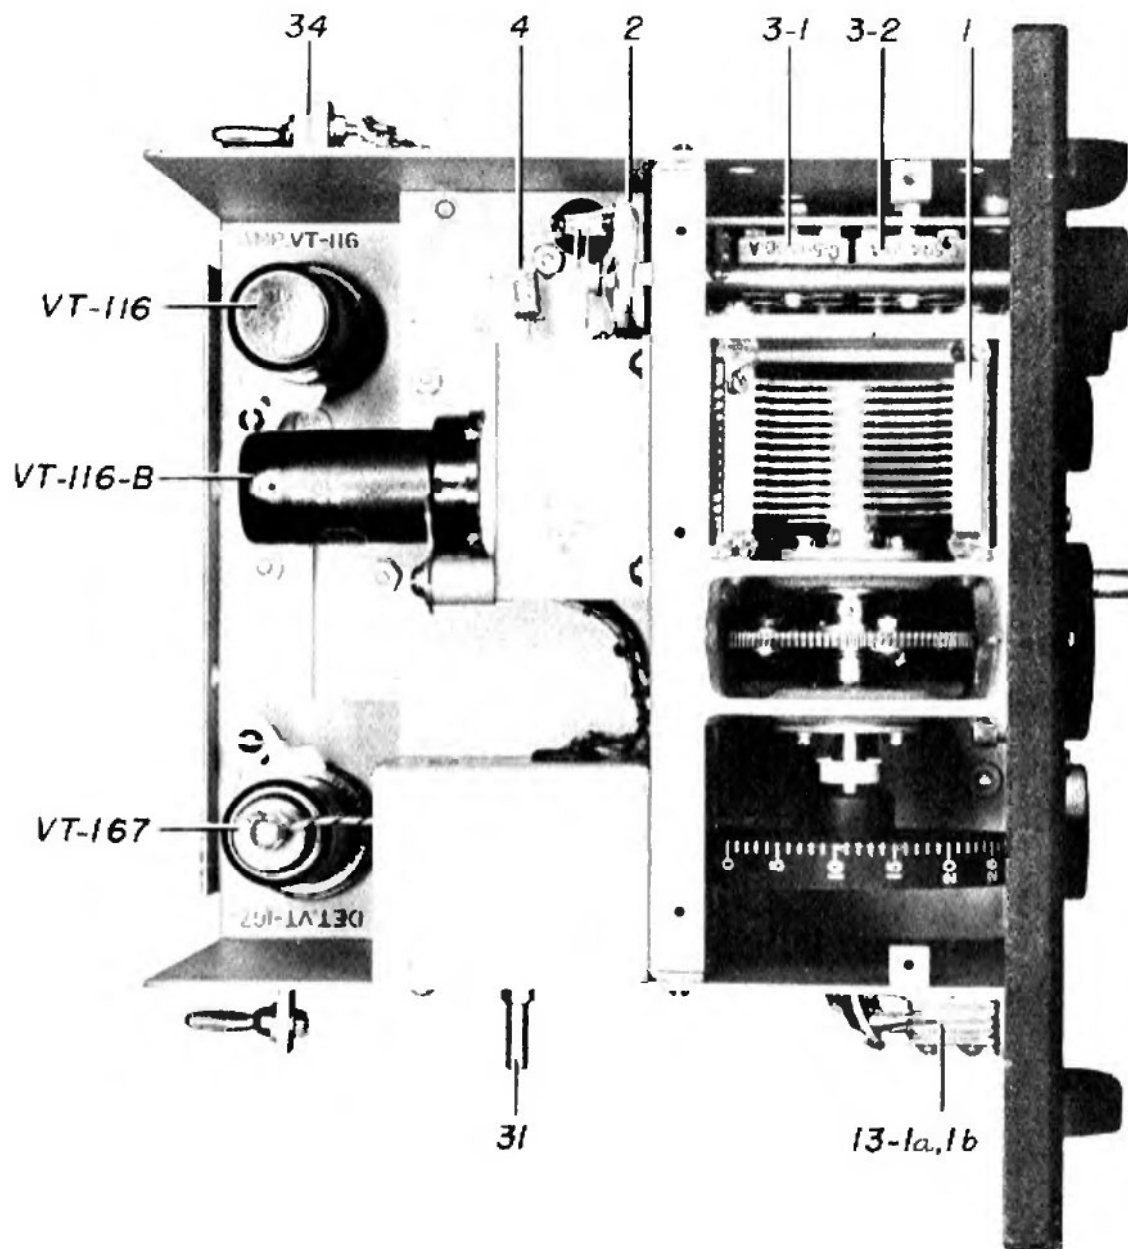


FIGURE 7- FREQUENCY METER BC-221-M, CHASSIS TOP VIEW WITH CAPACITOR SHIELD REMOVED

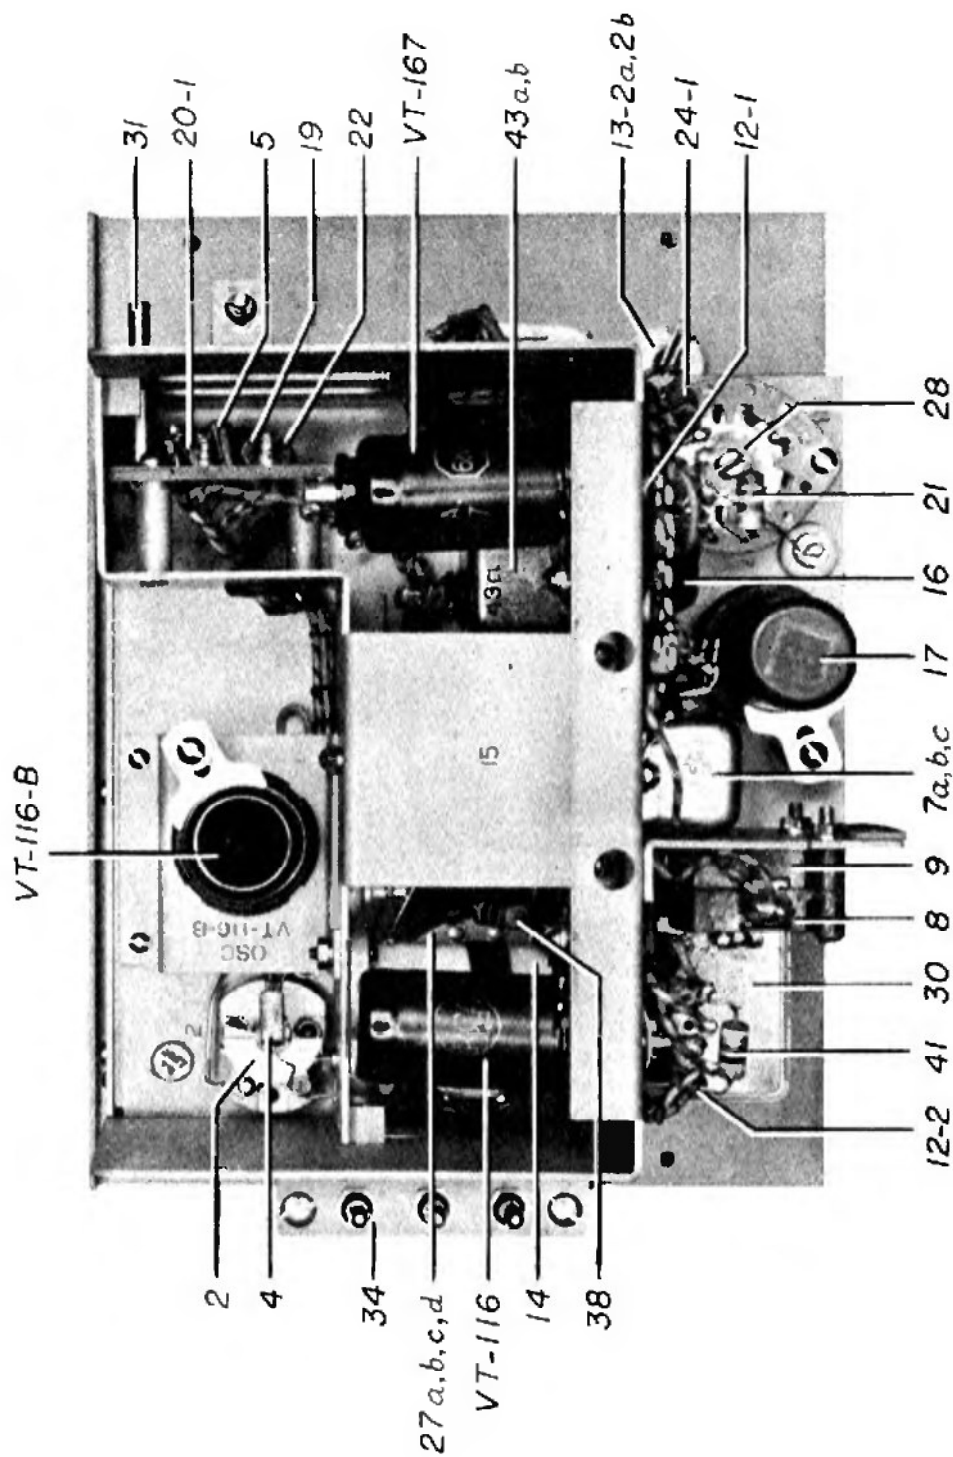


FIGURE 8 — FREQUENCY METER BC-221-M, CHASSIS REAR VIEW

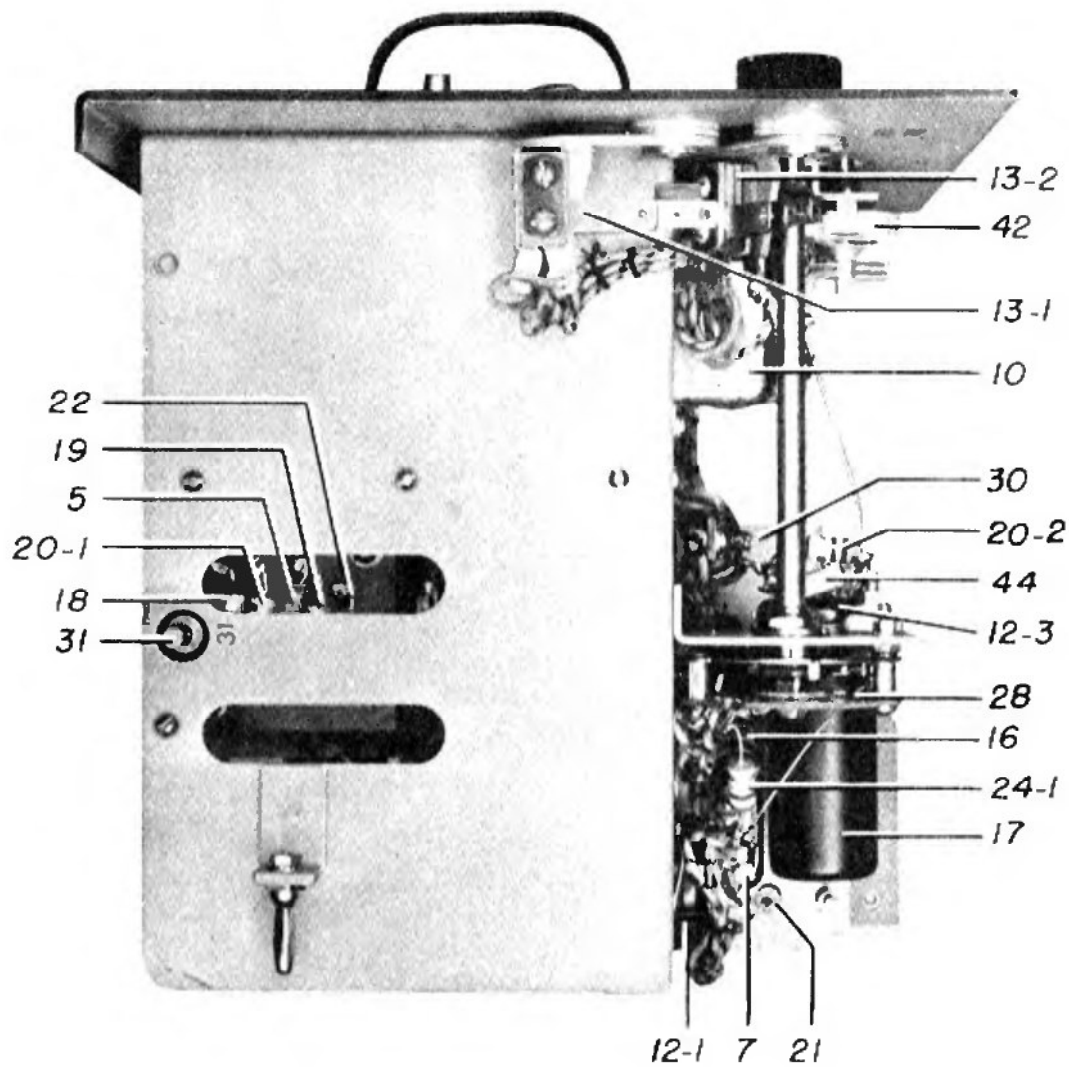


FIGURE 9 — FREQUENCY METER BC-221-M, CHASSIS LEFT SIDE

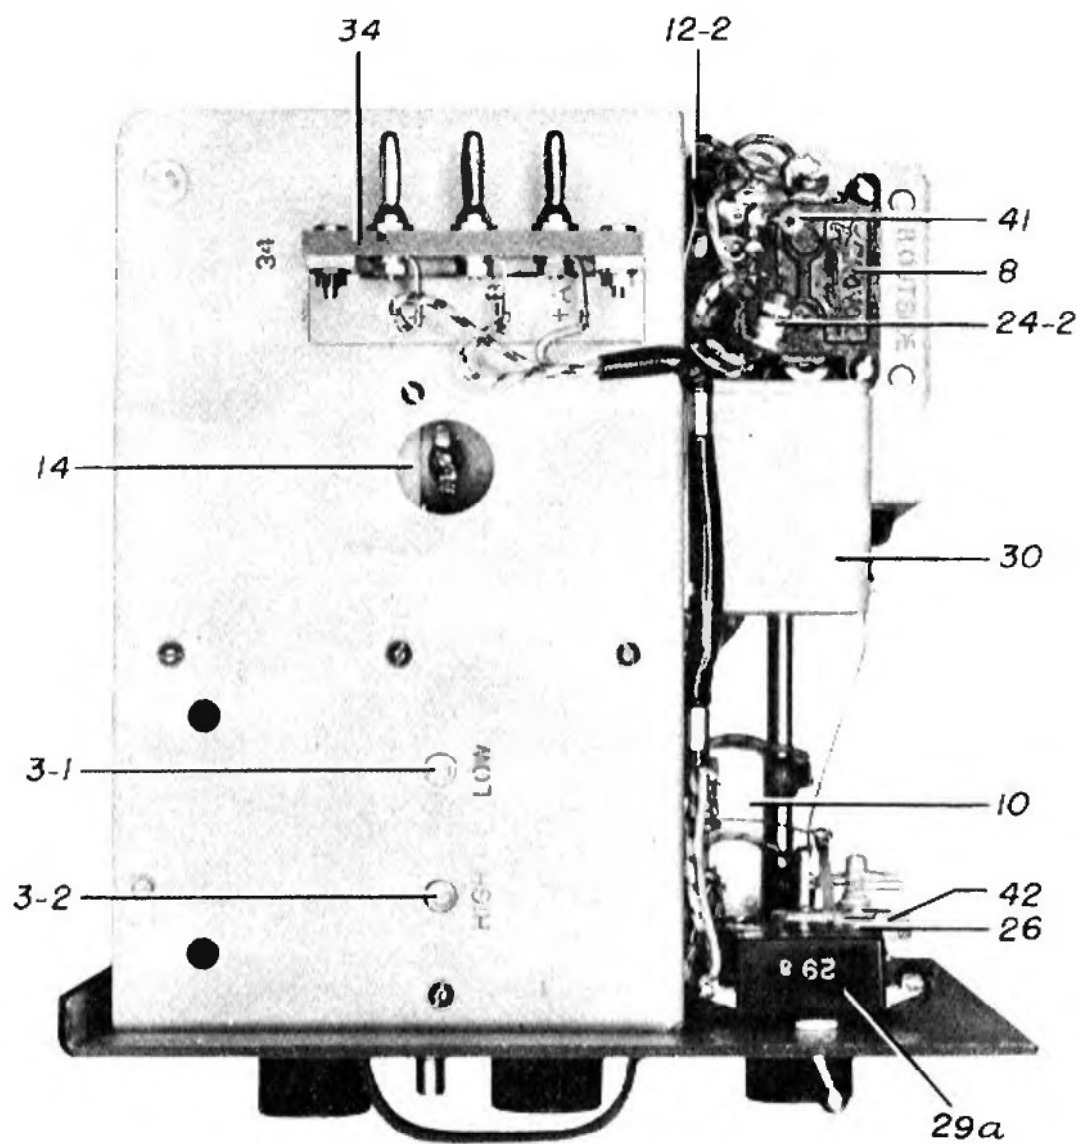


FIGURE 10 — FREQUENCY METER BC-221-M, CHASSIS RIGHT SIDE




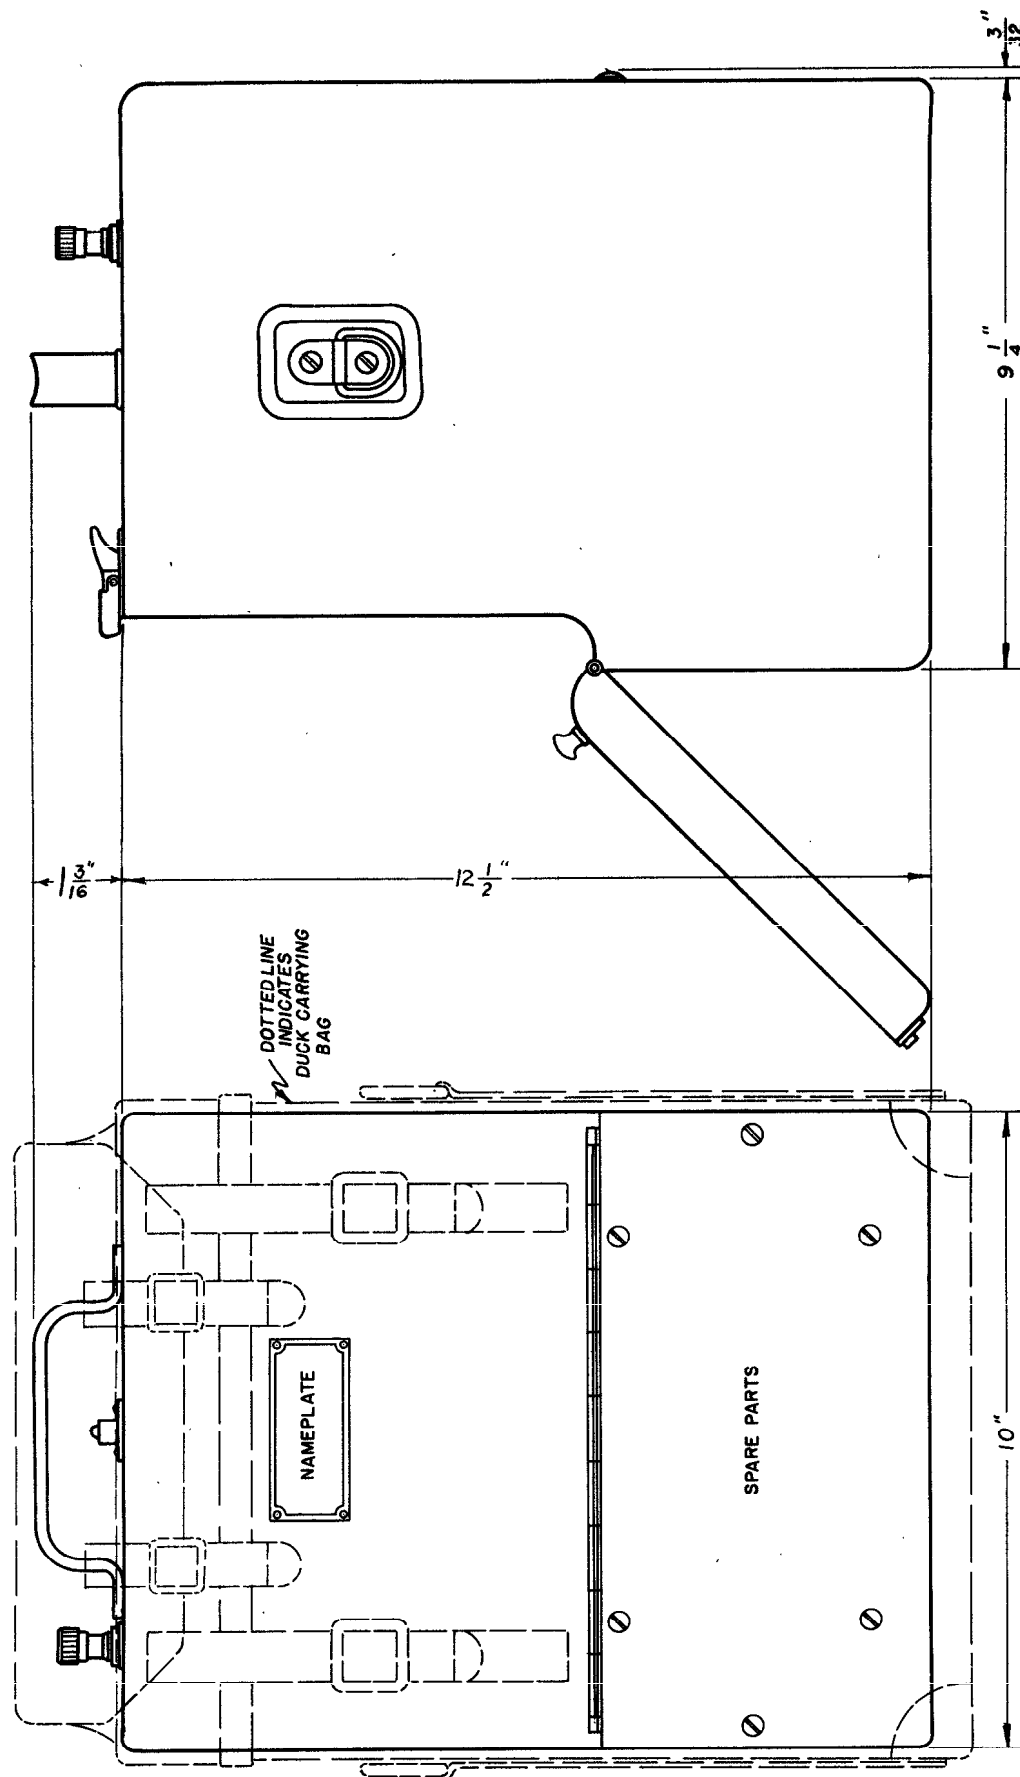



FIGURE 11 — FREQUENCY METER SET SCR-211-M, OUTLINE DIMENSIONS

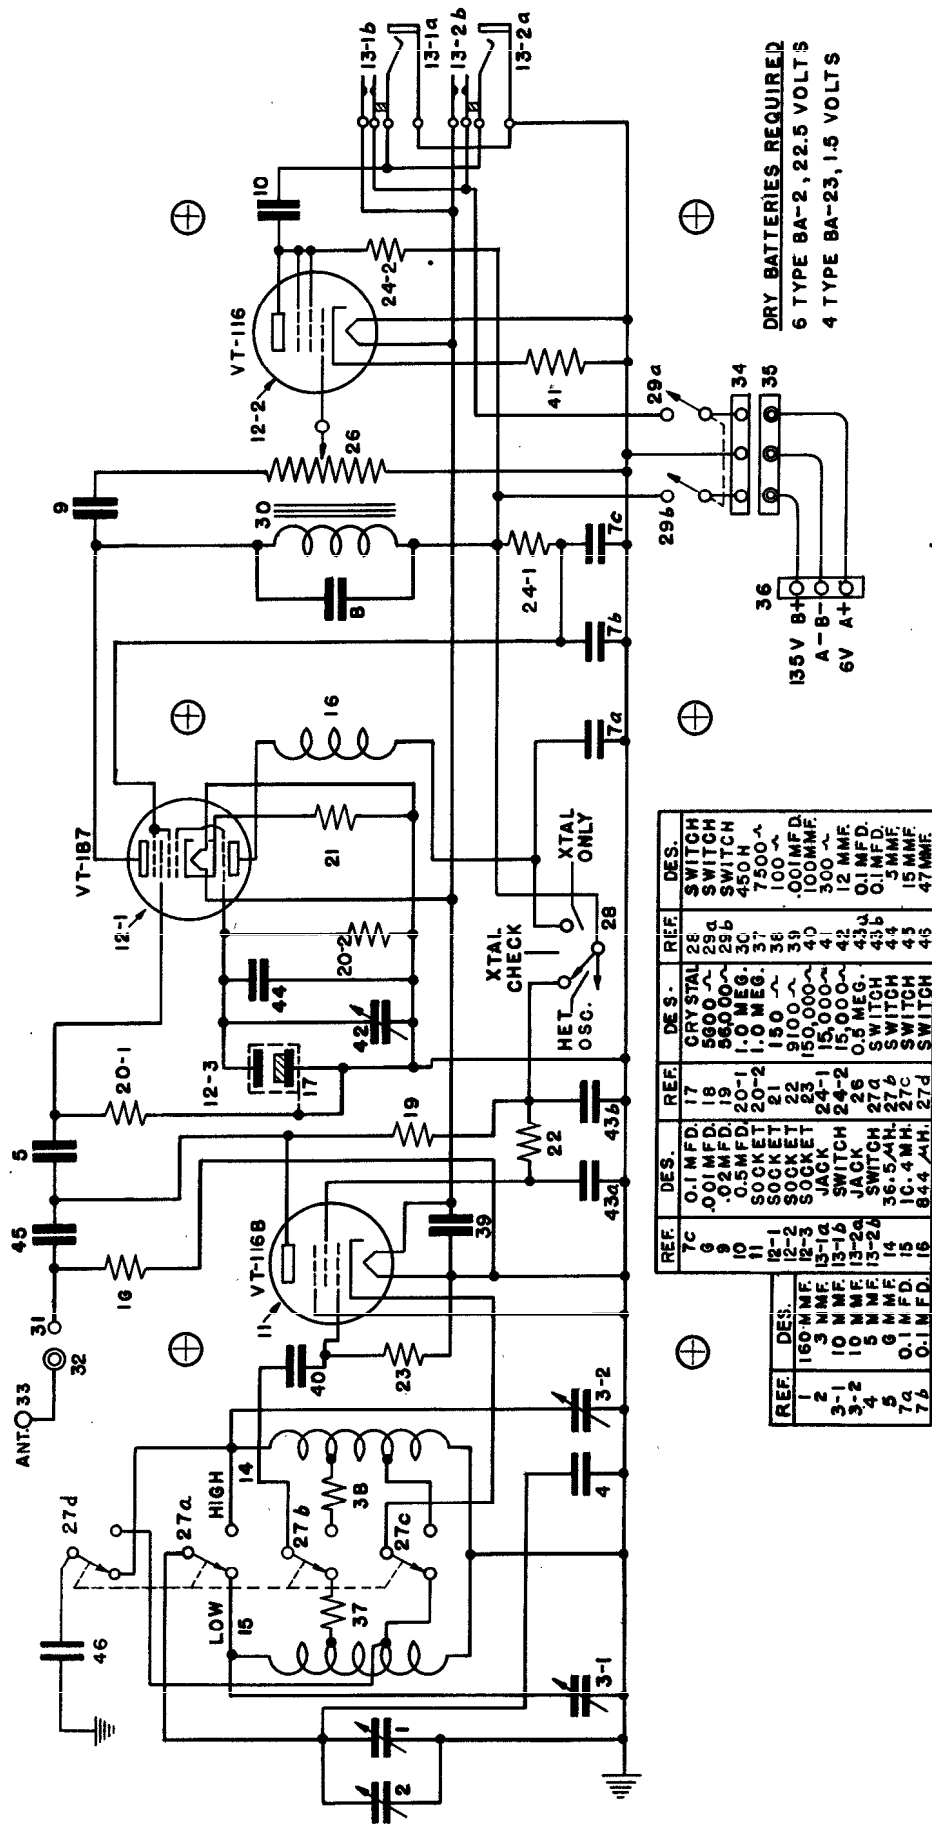

DRY BATTERIES REQUIRED  
6 TYPE BA-2, 22.5 VOLTS  
4 TYPE BA-23, 1.5 VOLTS

⊕

REF.	DES.	REF.	DES.	REF.	DES.	REF.	DES.
7c	0.1MFD.	17	CRYSTAL	28	SWITCH	28	SWITCH
8	0.01MFD.	18	5000~	29a	SWITCH	29b	SWITCH
9	0.02MFD.	19	5000~	30	SWITCH	31	SWITCH
10	0.05MFD.	20-1	1.0 MEG.	32	SWITCH	33	SWITCH
11	0.05MFD.	20-2	1.0 MEG.	34	SWITCH	35	SWITCH
12-1	SOCKET	21	150 ~	36	SWITCH	37	SWITCH
12-2	SOCKET	22	9100 ~	38	SWITCH	39	SWITCH
12-3	SOCKET	23	150,000~	40	SWITCH	41	SWITCH
13-1a	JACK	24-1	15,000~	42	SWITCH	43a	SWITCH
13-1b	JACK	24-2	15,000~	43b	SWITCH	43c	SWITCH
13-2a	JACK	25	0.5 MEG.	44	SWITCH	45	SWITCH
13-2b	JACK	26	0.5 MEG.	46	SWITCH	47	SWITCH
14	SWITCH	27a	SWITCH	48	SWITCH	49	SWITCH
15	36.5MH.	27b	SWITCH	50	SWITCH	51	SWITCH
16	1C.4MH.	27c	SWITCH	52	SWITCH	53	SWITCH
		27d	SWITCH	54	SWITCH	55	SWITCH
		27e	SWITCH	56	SWITCH	57	SWITCH
		27f	SWITCH	58	SWITCH	59	SWITCH
		27g	SWITCH	60	SWITCH	61	SWITCH
		27h	SWITCH	62	SWITCH	63	SWITCH
		27i	SWITCH	64	SWITCH	65	SWITCH
		27j	SWITCH	66	SWITCH	67	SWITCH
		27k	SWITCH	68	SWITCH	69	SWITCH
		27l	SWITCH	70	SWITCH	71	SWITCH
		27m	SWITCH	72	SWITCH	73	SWITCH
		27n	SWITCH	74	SWITCH	75	SWITCH
		27o	SWITCH	76	SWITCH	77	SWITCH
		27p	SWITCH	78	SWITCH	79	SWITCH
		27q	SWITCH	80	SWITCH	81	SWITCH
		27r	SWITCH	82	SWITCH	83	SWITCH
		27s	SWITCH	84	SWITCH	85	SWITCH
		27t	SWITCH	86	SWITCH	87	SWITCH
		27u	SWITCH	88	SWITCH	89	SWITCH
		27v	SWITCH	90	SWITCH	91	SWITCH
		27w	SWITCH	92	SWITCH	93	SWITCH
		27x	SWITCH	94	SWITCH	95	SWITCH
		27y	SWITCH	96	SWITCH	97	SWITCH
		27z	SWITCH	98	SWITCH	99	SWITCH
		28	SWITCH	100	SWITCH	101	SWITCH
		29a	SWITCH	102	SWITCH	103	SWITCH
		29b	SWITCH	104	SWITCH	105	SWITCH
		30	SWITCH	106	SWITCH	107	SWITCH
		31	SWITCH	108	SWITCH	109	SWITCH
		32	SWITCH	110	SWITCH	111	SWITCH
		33	SWITCH	112	SWITCH	113	SWITCH
		34	SWITCH	114	SWITCH	115	SWITCH
		35	SWITCH	116	SWITCH	117	SWITCH
		36	SWITCH	118	SWITCH	119	SWITCH
		37	SWITCH	120	SWITCH	121	SWITCH
		38	SWITCH	122	SWITCH	123	SWITCH
		39	SWITCH	124	SWITCH	125	SWITCH
		40	SWITCH	126	SWITCH	127	SWITCH
		41	SWITCH	128	SWITCH	129	SWITCH
		42	SWITCH	130	SWITCH	131	SWITCH
		43a	SWITCH	132	SWITCH	133	SWITCH
		43b	SWITCH	134	SWITCH	135	SWITCH
		43c	SWITCH	136	SWITCH	137	SWITCH
		44	SWITCH	138	SWITCH	139	SWITCH
		45	SWITCH	140	SWITCH	141	SWITCH
		46	SWITCH	142	SWITCH	143	SWITCH
		47	SWITCH	144	SWITCH	145	SWITCH
		48	SWITCH	146	SWITCH	147	SWITCH
		49	SWITCH	148	SWITCH	149	SWITCH
		50	SWITCH	150	SWITCH	151	SWITCH
		51	SWITCH	152	SWITCH	153	SWITCH
		52	SWITCH	154	SWITCH	155	SWITCH
		53	SWITCH	156	SWITCH	157	SWITCH
		54	SWITCH	158	SWITCH	159	SWITCH
		55	SWITCH	160	SWITCH	161	SWITCH
		56	SWITCH	162	SWITCH	163	SWITCH
		57	SWITCH	164	SWITCH	165	SWITCH
		58	SWITCH	166	SWITCH	167	SWITCH
		59	SWITCH	168	SWITCH	169	SWITCH
		60	SWITCH	170	SWITCH	171	SWITCH
		61	SWITCH	172	SWITCH	173	SWITCH
		62	SWITCH	174	SWITCH	175	SWITCH
		63	SWITCH	176	SWITCH	177	SWITCH
		64	SWITCH	178	SWITCH	179	SWITCH
		65	SWITCH	180	SWITCH	181	SWITCH
		66	SWITCH	182	SWITCH	183	SWITCH
		67	SWITCH	184	SWITCH	185	SWITCH
		68	SWITCH	186	SWITCH	187	SWITCH
		69	SWITCH	188	SWITCH	189	SWITCH
		70	SWITCH	190	SWITCH	191	SWITCH
		71	SWITCH	192	SWITCH	193	SWITCH
		72	SWITCH	194	SWITCH	195	SWITCH
		73	SWITCH	196	SWITCH	197	SWITCH
		74	SWITCH	198	SWITCH	199	SWITCH
		75	SWITCH	200	SWITCH	201	SWITCH
		76	SWITCH	202	SWITCH	203	SWITCH
		77	SWITCH	204	SWITCH	205	SWITCH
		78	SWITCH	206	SWITCH	207	SWITCH
		79	SWITCH	208	SWITCH	209	SWITCH
		80	SWITCH	210	SWITCH	211	SWITCH
		81	SWITCH	212	SWITCH	213	SWITCH
		82	SWITCH	214	SWITCH	215	SWITCH
		83	SWITCH	216	SWITCH	217	SWITCH
		84	SWITCH	218	SWITCH	219	SWITCH
		85	SWITCH	220	SWITCH	221	SWITCH
		86	SWITCH	222	SWITCH	223	SWITCH
		87	SWITCH	224	SWITCH	225	SWITCH
		88	SWITCH	226	SWITCH	227	SWITCH
		89	SWITCH	228	SWITCH	229	SWITCH
		90	SWITCH	230	SWITCH	231	SWITCH
		91	SWITCH	232	SWITCH	233	SWITCH
		92	SWITCH	234	SWITCH	235	SWITCH
		93	SWITCH	236	SWITCH	237	SWITCH
		94	SWITCH	238	SWITCH	239	SWITCH
		95	SWITCH	240	SWITCH	241	SWITCH
		96	SWITCH	242	SWITCH	243	SWITCH
		97	SWITCH	244	SWITCH	245	SWITCH
		98	SWITCH	246	SWITCH	247	SWITCH
		99	SWITCH	248	SWITCH	249	SWITCH
		100	SWITCH	250	SWITCH	251	SWITCH
		101	SWITCH	252	SWITCH	253	SWITCH
		102	SWITCH	254	SWITCH	255	SWITCH
		103	SWITCH	256	SWITCH	257	SWITCH
		104	SWITCH	258	SWITCH	259	SWITCH
		105	SWITCH	260	SWITCH	261	SWITCH
		106	SWITCH	262	SWITCH	263	SWITCH
		107	SWITCH	264	SWITCH	265	SWITCH
		108	SWITCH	266	SWITCH	267	SWITCH
		109	SWITCH	268	SWITCH	269	SWITCH
		110	SWITCH	270	SWITCH	271	SWITCH
		111	SWITCH	272	SWITCH	273	SWITCH
		112	SWITCH	274	SWITCH	275	SWITCH
		113	SWITCH	276	SWITCH	277	SWITCH
		114	SWITCH	278	SWITCH	279	SWITCH
		115	SWITCH	280	SWITCH	281	SWITCH
		116	SWITCH	282	SWITCH	283	SWITCH
		117	SWITCH	284	SWITCH	285	SWITCH
		118	SWITCH	286	SWITCH	287	SWITCH
		119	SWITCH	288	SWITCH	289	SWITCH
		120	SWITCH	290	SWITCH	291	SWITCH
		121	SWITCH	292	SWITCH	293	SWITCH
		122	SWITCH	294	SWITCH	295	SWITCH
		123	SWITCH	296	SWITCH	297	SWITCH
		124	SWITCH	298	SWITCH	299	SWITCH
		125	SWITCH	300	SWITCH	301	SWITCH
		126	SWITCH	302	SWITCH	303	SWITCH
		127	SWITCH	304	SWITCH	305	SWITCH
		128	SWITCH	306	SWITCH	307	SWITCH
		129	SWITCH	308	SWITCH	309	SWITCH
		130	SWITCH	310	SWITCH	311	SWITCH
		131	SWITCH	312	SWITCH	313	SWITCH
		132	SWITCH	314	SWITCH	315	SWITCH
		133	SWITCH	316	SWITCH	317	SWITCH
		134	SWITCH	318	SWITCH	319	SWITCH
		135	SWITCH	320	SWITCH	321	SWITCH
		136	SWITCH	322	SWITCH	323	SWITCH
		137	SWITCH	324	SWITCH	325	SWITCH
		138	SWITCH	326	SWITCH	327	SWITCH
		139	SWITCH	328	SWITCH	329	SWITCH
		140	SWITCH	330	SWITCH	331	SWITCH
		141	SWITCH	332	SWITCH	333	SWITCH
		142	SWITCH	334	SWITCH	335	SWITCH
		143	SWITCH	336	SWITCH	337	SWITCH
		144	SWITCH	338	SWITCH	339	SWITCH
		145	SWITCH	340	SWITCH	341	SWITCH
		146	SWITCH	342	SWITCH	343	SWITCH
		147	SWITCH	344	SWITCH	345	SWITCH
		148	SWITCH	346	SWITCH	347	SWITCH
		149	SWITCH	348	SWITCH	349	SWITCH
		150	SWITCH	350	SWITCH	351	SWITCH
		151	SWITCH	352	SWITCH	353	SWITCH
		152	SWITCH	354	SWITCH	355	SWITCH
		153	SWITCH	356	SWITCH	357	SWITCH
		154	SWITCH	358	SWITCH	359	SWITCH
		155	SWITCH	360	SWITCH	361	SWITCH
		156	SWITCH	362	SWITCH	363	SWITCH
		157	SWITCH	364	SWITCH	365	SWITCH
		158	SWITCH	366	SWITCH	367	SWITCH
		159	SWITCH	368	SWITCH	369	SWITCH
		160	SWITCH	370	SWITCH	371	SWITCH
		161	SWITCH	372	SWITCH	373	SWITCH
		162	SWITCH	374	SWITCH	375	SWITCH
		163	SWITCH	376	SWITCH	377	SWITCH
		164	SWITCH	378	SWITCH	379	SWITCH
		165	SWITCH	380	SWITCH	381	SWITCH
		166	SWITCH	382	SWITCH	383	SWITCH
		167	SWITCH	384	SWITCH	385	SWITCH
		168	SWITCH	386	SWITCH	387	SWITCH
		169	SWITCH	388	SWITCH	389	SWITCH
		170	SWITCH	390	SWITCH	391	SWITCH
		171	SWITCH	392	SWITCH	393	SWITCH
		172	SWITCH	394	SWITCH	395	SWITCH
		173	SWITCH	396	SWITCH	397	SWITCH
		174	SWITCH	398	SWITCH	399	SWITCH
		175	SWITCH	400	SWITCH	401	SWITCH
		176	SWITCH	402	SWITCH	403	SWITCH
		177	SWITCH	404	SWITCH	405	SWITCH
		178	SWITCH	406	SWITCH	407	SWITCH
		179	SWITCH	408	SWITCH	409	SWITCH
		180	SWITCH	410	SWITCH	411	SWITCH
		181	SWITCH	412	SWITCH	413	SWITCH
		182	SWITCH	414	SWITCH	415	SWITCH
		183	SWITCH	416	SWITCH	417	SWITCH
		184	SWITCH	418	SWITCH	419	SWITCH
		185	SWITCH	420	SWITCH	421	SWITCH
		186	SWITCH	422	SWITCH	423	SWITCH
		187	SWITCH	424	SWITCH	425	SWITCH
		188	SWITCH	426	SWITCH	427	SWITCH
		189	SWITCH	428	SWITCH	429	SWITCH
		190	SWITCH	430	SWITCH	431	SWITCH
		191	SWITCH	432	SWITCH	433	SWITCH
		192	SWITCH	434	SWITCH	435	SWITCH
		193	SWITCH	436	SWITCH	437	SWITCH
		194	SWITCH	438	SWITCH	439	SWITCH
		195	SWITCH	440	SWITCH	441	SWITCH
		196	SWITCH	442	SWITCH	443	SWITCH
		197	SWITCH	444	SWITCH	445	SWITCH
		198	SWITCH	446	SWITCH	447	SWITCH
		199	SWITCH	448	SWITCH	449	SWITCH
		200	SWITCH	450	SWITCH	451	SWITCH
		201	SWITCH	452	SWITCH	453	SWITCH
		202	SWITCH	454	SWITCH		

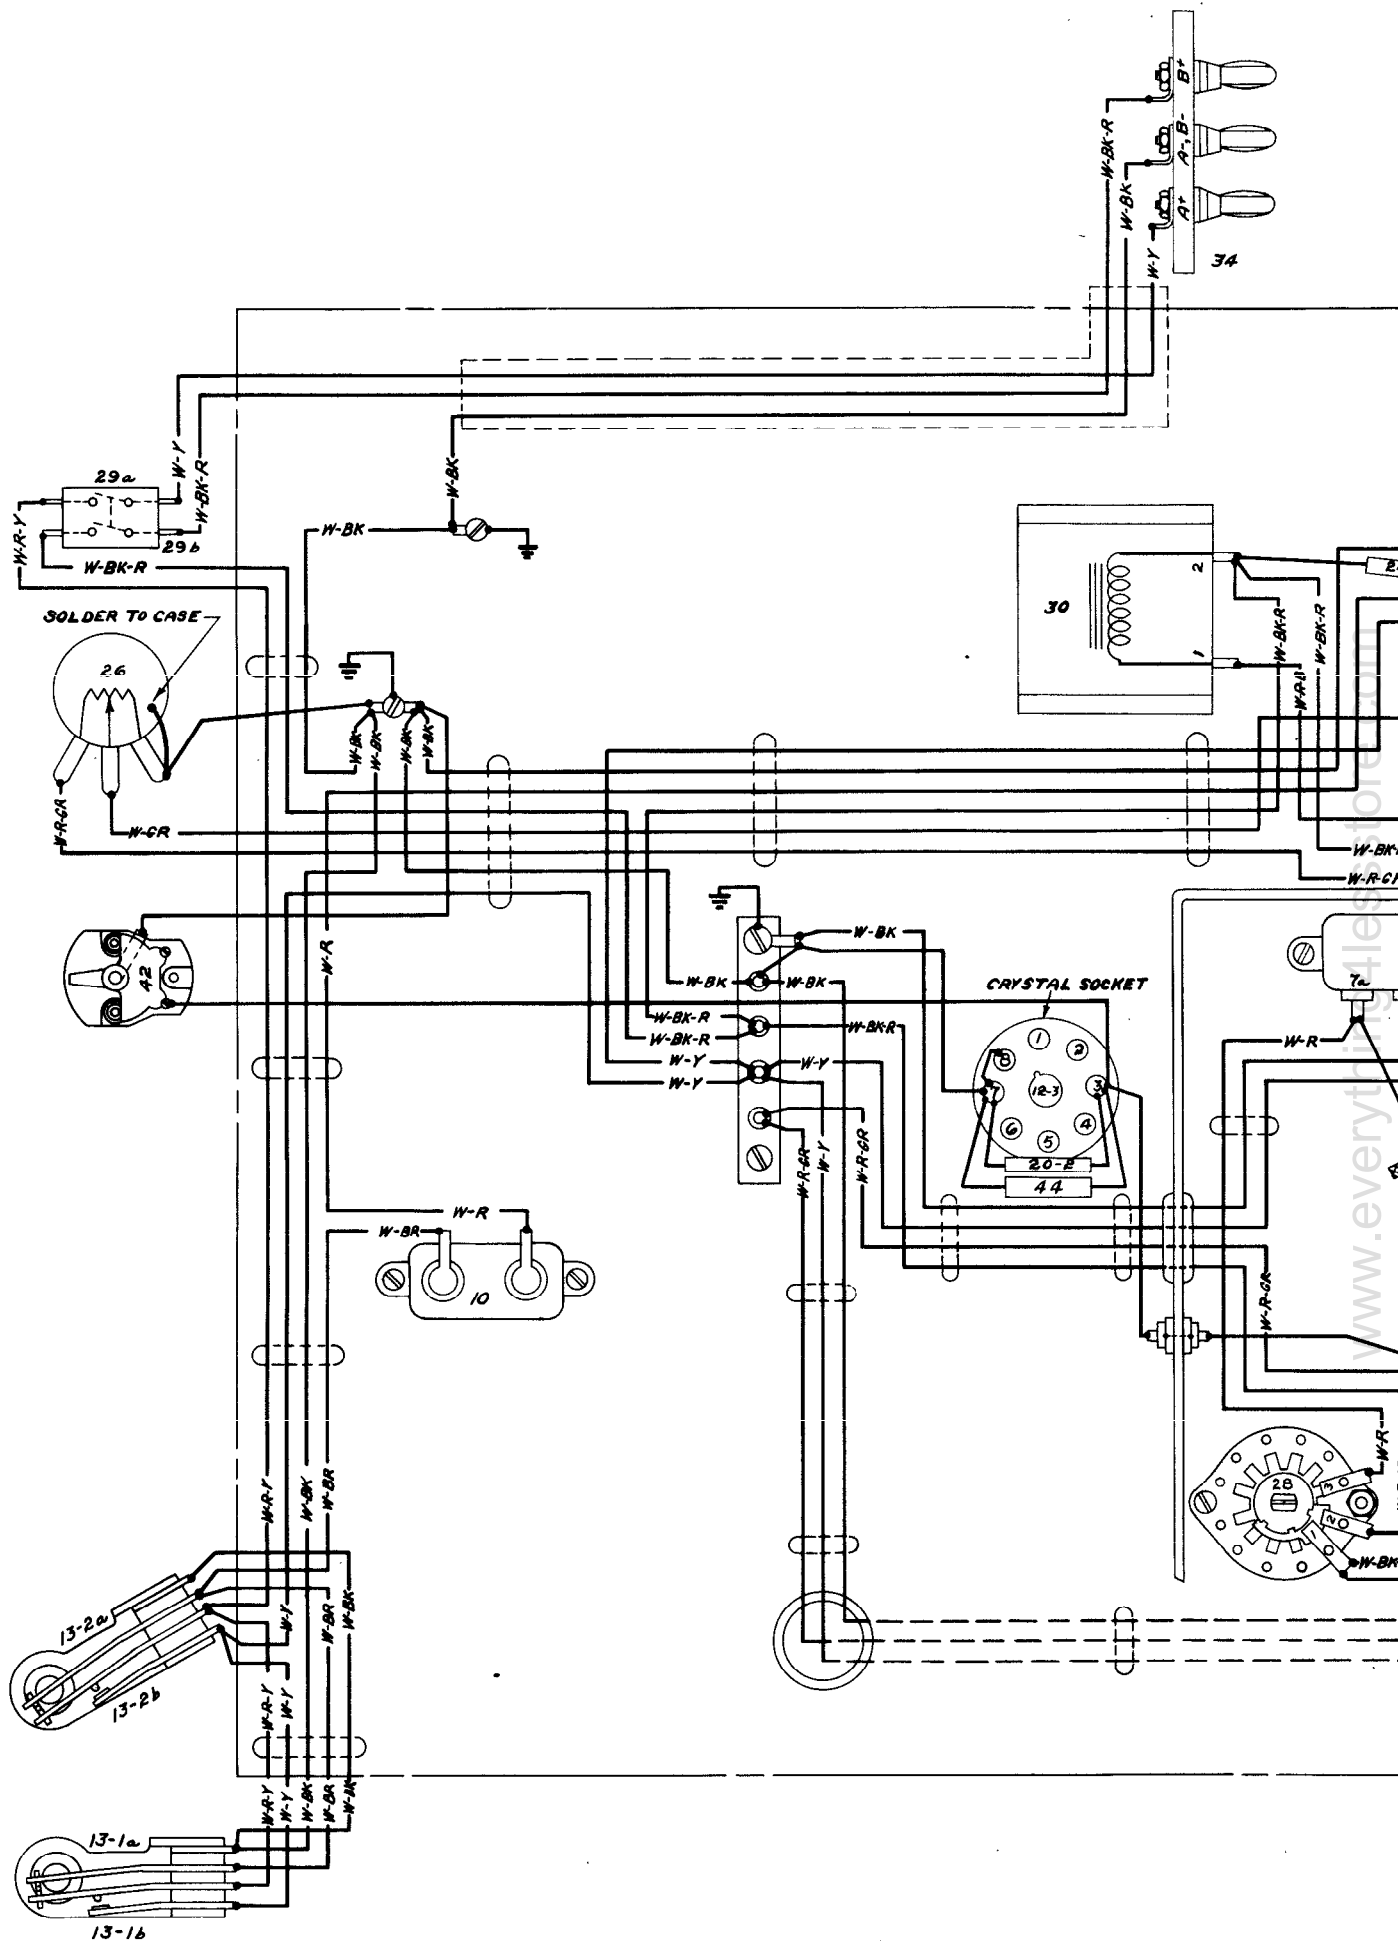

WIRING LEGEND	
CODE	COLOR
B	BLUE
BK	BLACK
BR	BROWN
GR	GREEN
OR	ORANGE
R	RED
W	WHITE
Y	YELLOW

- NOTES:
- 1.-ALL JOINTS ARE TO BE MECHANICALLY SECURE BEFORE SOLDERING.
  - 2.-ALL INSULATED WIRE IS #20 R.F. WIRE.
  - 3.-LACING INDICATED IS PART OF ITEMS.

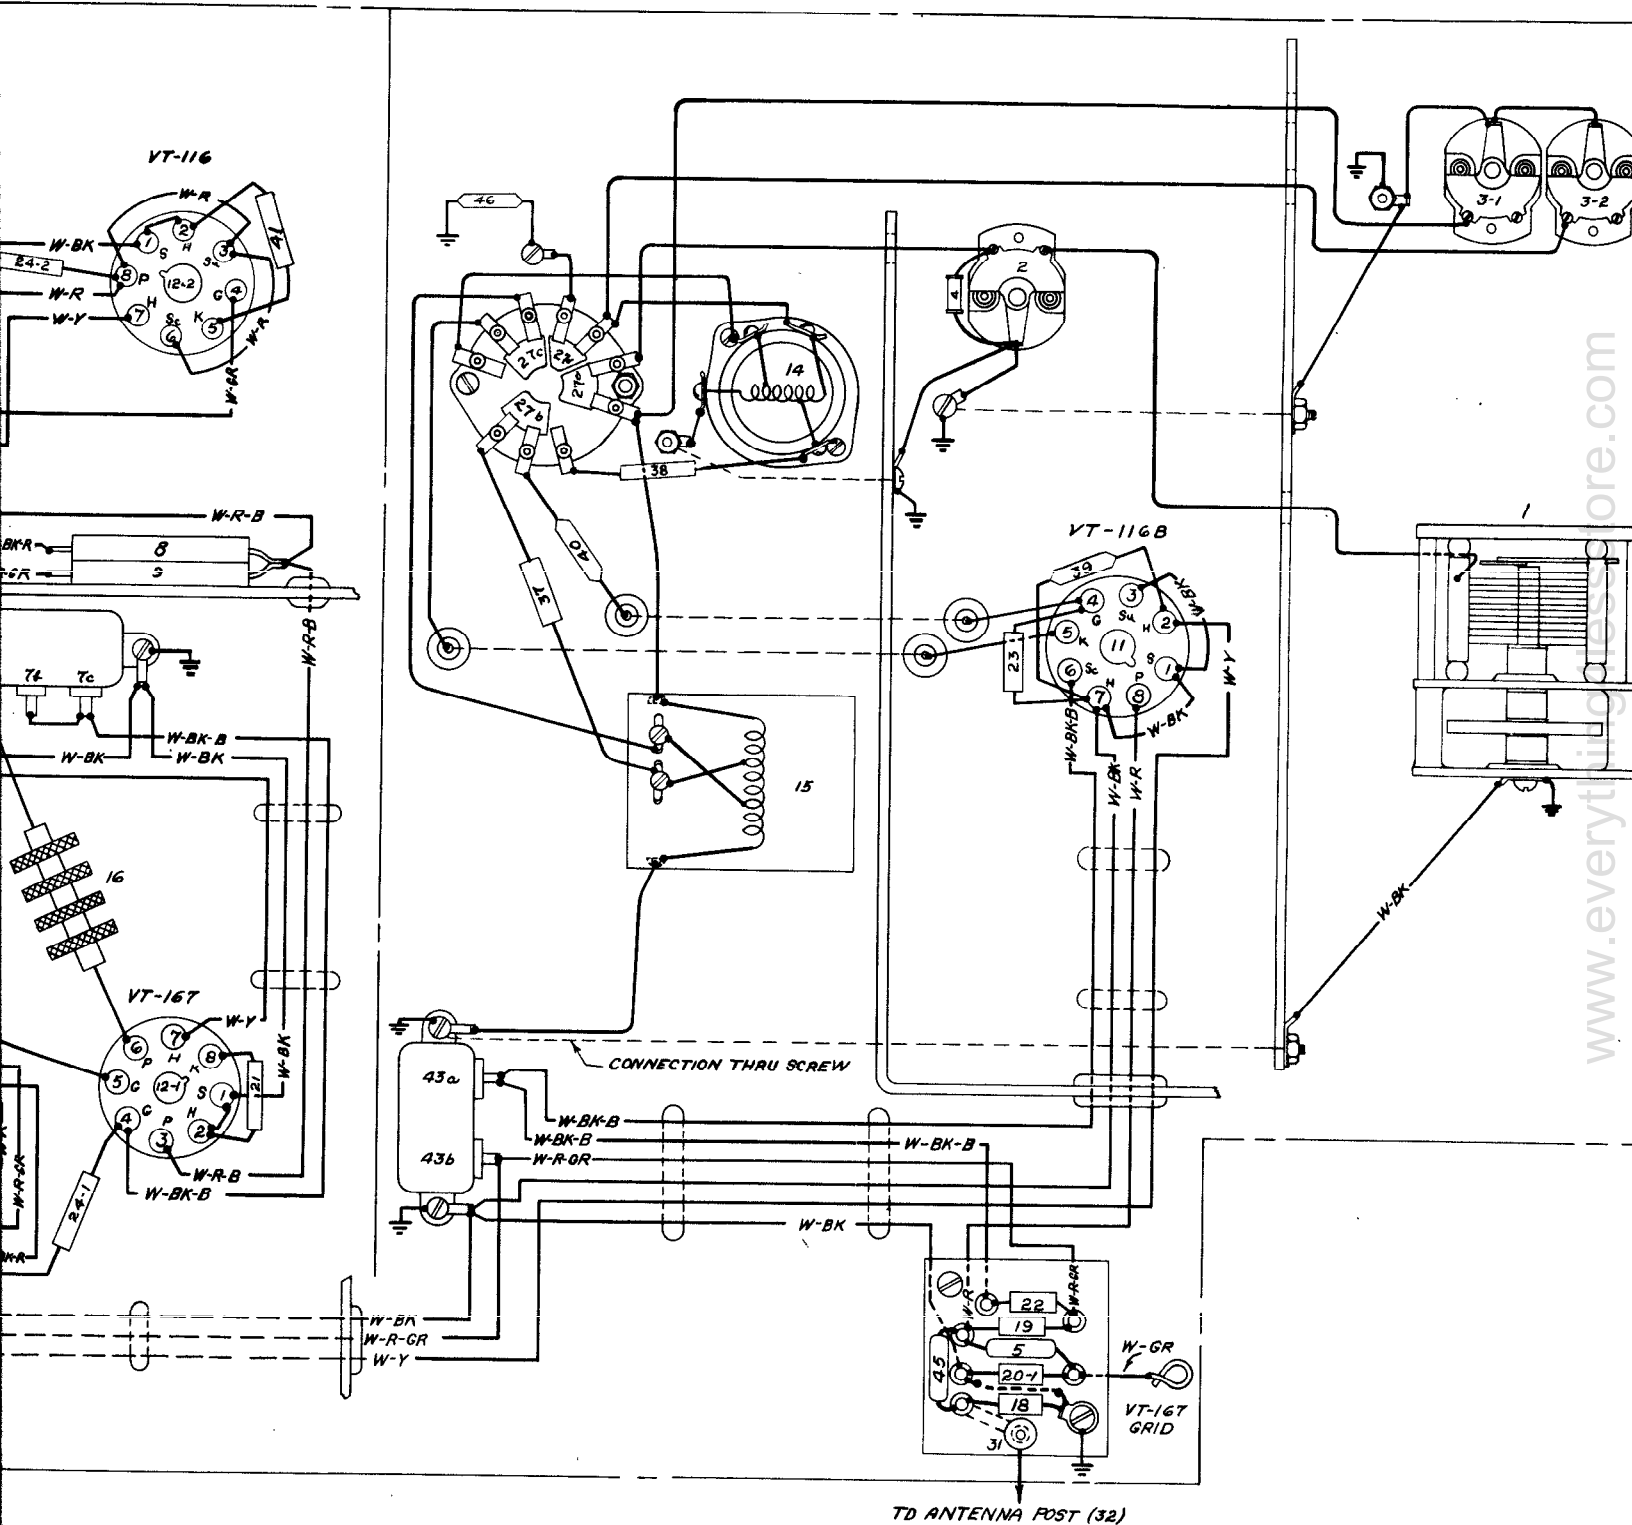


FIGURE 13

FREQUENCY METER BC-221-M, CHASSIS WIRING DIAGRAM

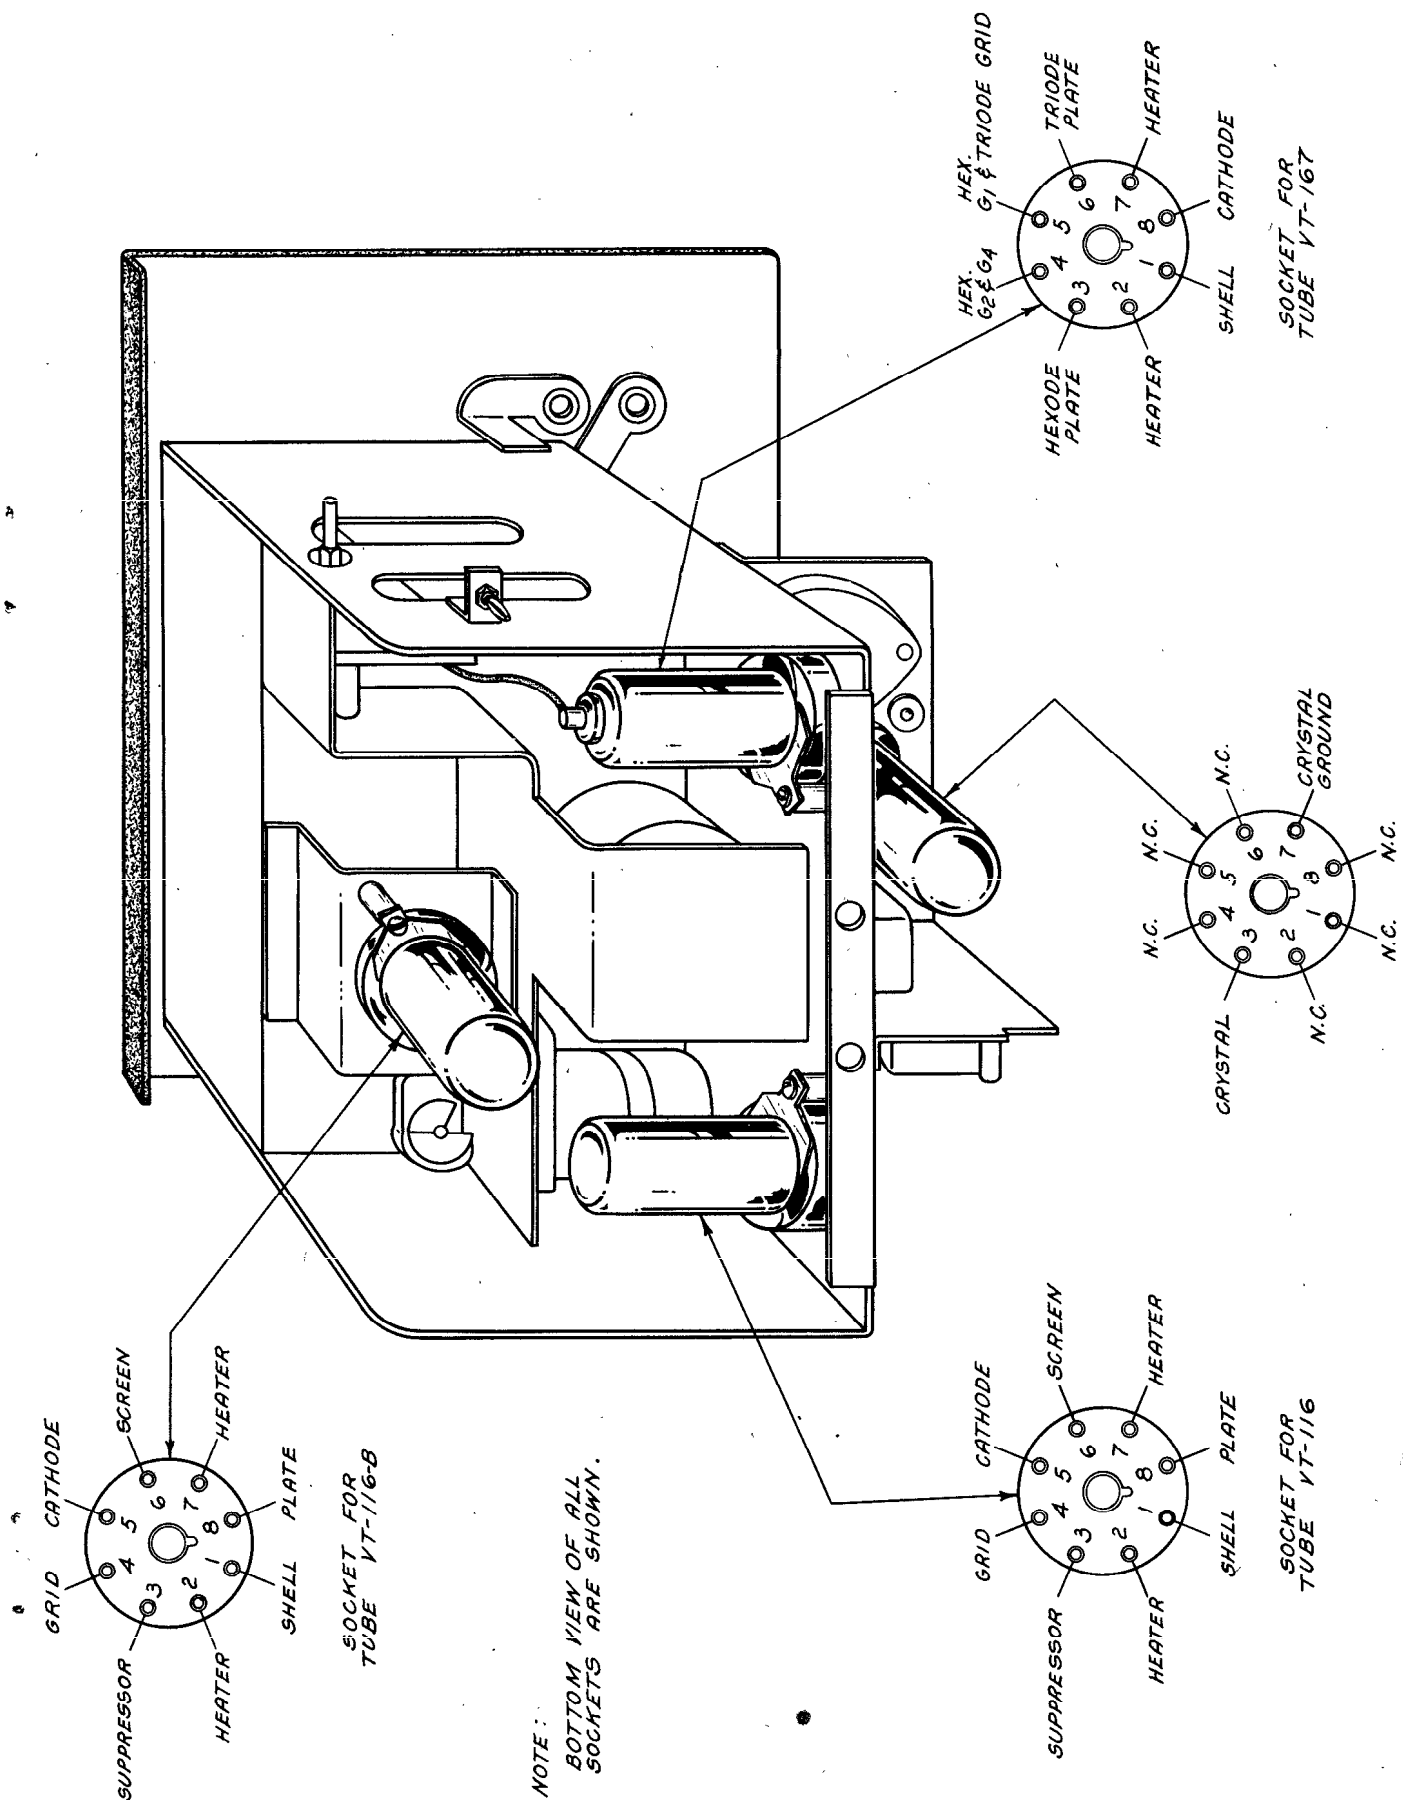


FIGURE 14 — FREQUENCY METER SET SCR-211-M, VACUUM TUBE LOCATIONS

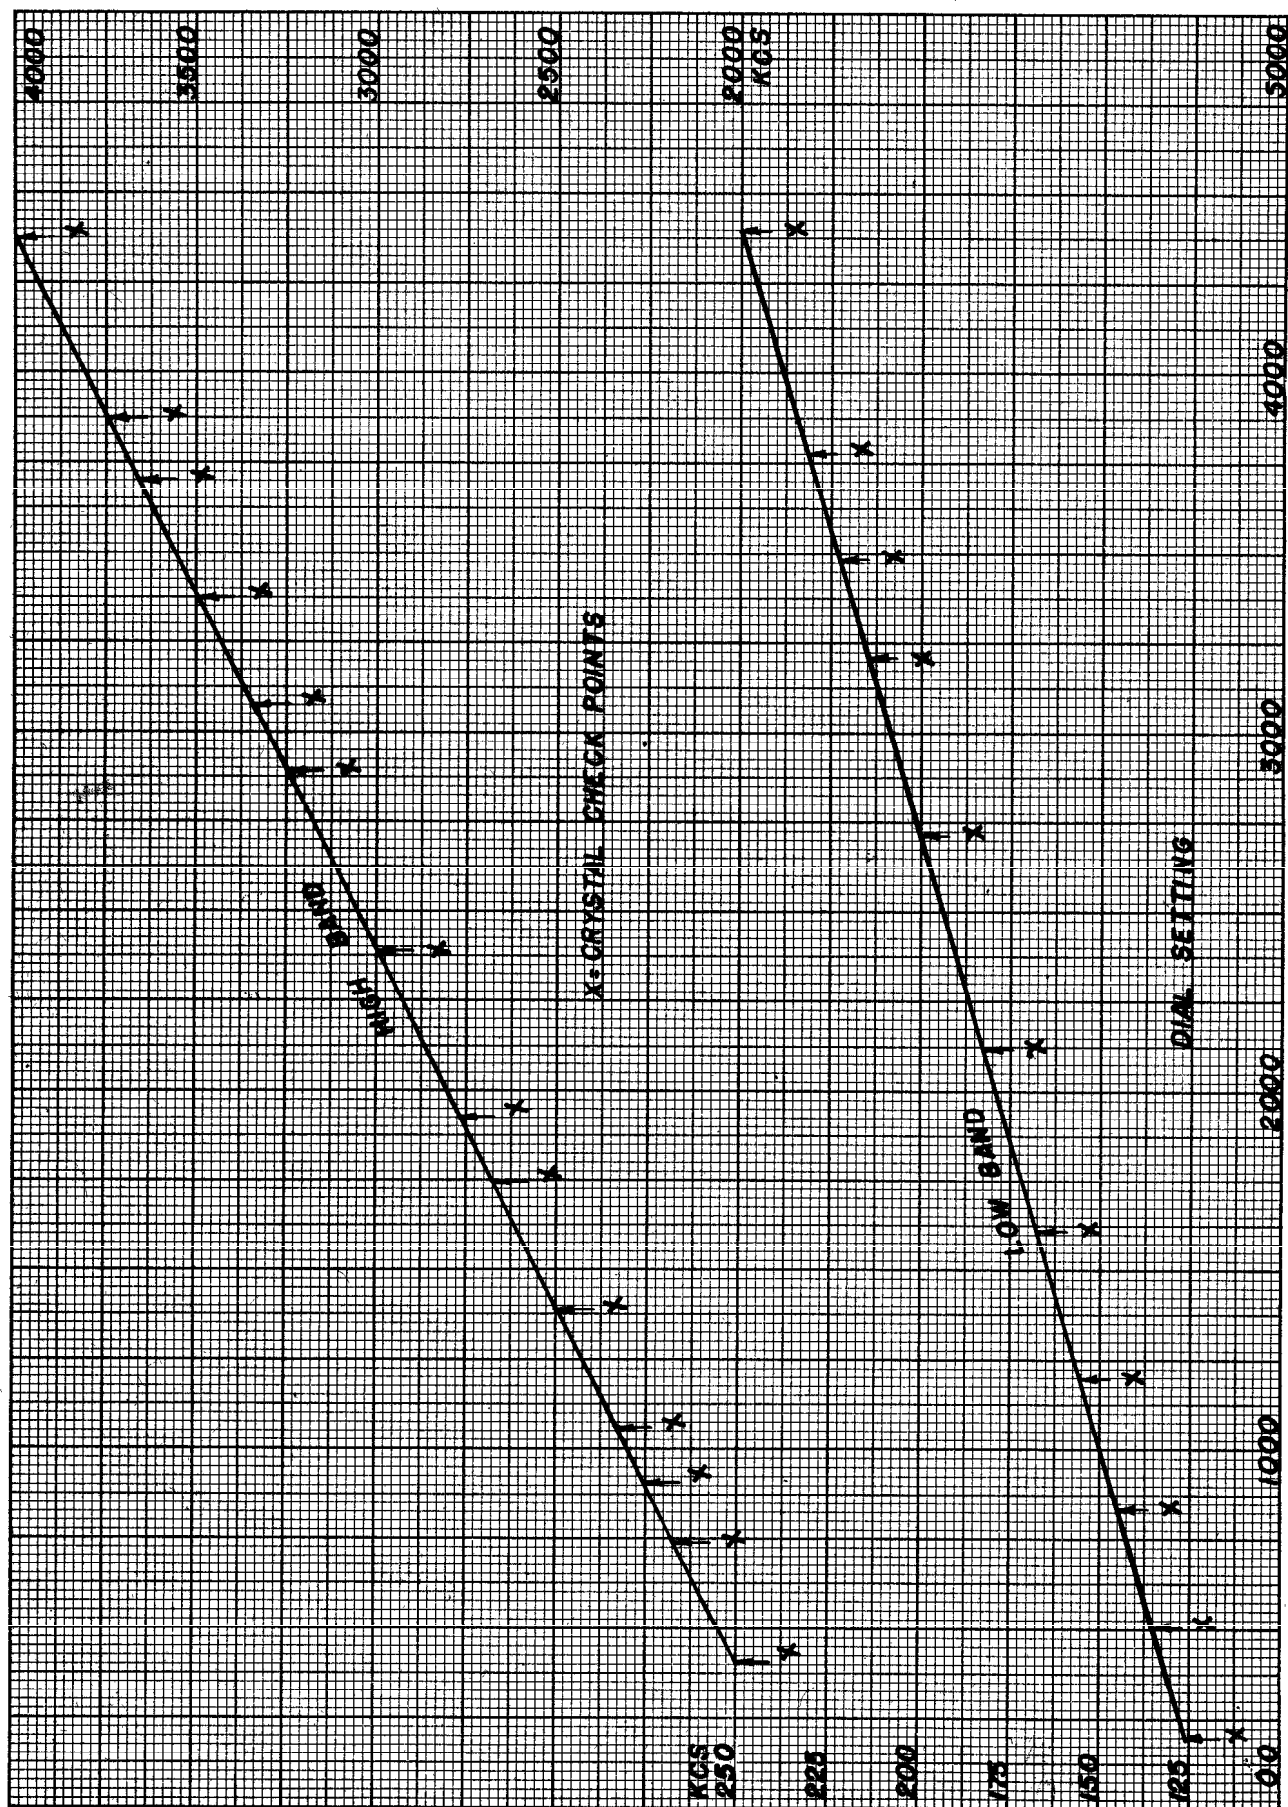


FIGURE 15 — FREQUENCY METER BC-221-M, TYPICAL HET. OSC. TUNING CURVES